

# **The Linux-USB Host Side API**

## **The Linux-USB Host Side API**

This documentation is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

For more details see the file COPYING in the source distribution of Linux.

# Table of Contents

<b>1. Introduction to USB on Linux .....</b>	<b>1</b>
<b>2. USB Host-Side API Model .....</b>	<b>3</b>
<b>3. USB-Standard Types .....</b>	<b>5</b>
struct usb_ctrlrequest .....	5
<b>4. Host-Side Data Types and Macros .....</b>	<b>7</b>
struct usb_host_endpoint .....	7
struct usb_interface .....	8
struct usb_interface_cache .....	10
struct usb_host_config .....	11
usb_interface_claimed .....	13
usb_make_path .....	14
usb_endpoint_dir_in .....	15
usb_endpoint_dir_out .....	16
usb_endpoint_xfer_bulk .....	17
usb_endpoint_xfer_control .....	18
usb_endpoint_xfer_int .....	19
usb_endpoint_xfer_isoc .....	19
usb_endpoint_is_bulk_in .....	20
usb_endpoint_is_bulk_out .....	21
usb_endpoint_is_int_in .....	22
usb_endpoint_is_int_out .....	23
usb_endpoint_is_isoc_in .....	24
usb_endpoint_is_isoc_out .....	24
USB_DEVICE .....	25
USB_DEVICE_VER .....	26
USB_DEVICE_INFO .....	27
USB_INTERFACE_INFO .....	28
struct usbdrv_wrap .....	29
struct usb_driver .....	30
struct usb_device_driver .....	33
struct usb_class_driver .....	34
struct urb .....	35
usb_fill_control_urb .....	40
usb_fill_bulk_urb .....	42
usb_fill_int_urb .....	43
struct usb_sg_request .....	44
<b>5. USB Core APIs .....</b>	<b>47</b>
usb_init_urb .....	47
usb_alloc_urb .....	48
usb_free_urb .....	49

usb_get_urb.....	50
usb_submit_urb.....	51
usb_unlink_urb .....	54
usb_kill_urb .....	55
usb_control_msg.....	56
usb_interrupt_msg.....	58
usb_bulk_msg .....	60
usb_sg_init .....	61
usb_sg_wait.....	63
usb_sg_cancel .....	64
usb_get_descriptor .....	65
usb_string.....	67
usb_get_status.....	68
usb_clear_halt .....	70
usb_set_interface.....	71
usb_reset_configuration .....	72
usb_driver_set_configuration.....	73
usb_register_dev .....	75
usb_deregister_dev.....	76
usb_driver_claim_interface.....	77
usb_driver_release_interface .....	78
usb_match_id .....	79
usb_register_device_driver .....	81
usb_deregister_device_driver.....	82
usb_register_driver.....	83
usb_deregister .....	84
usb_autopm_put_interface .....	85
usb_autopm_get_interface .....	87
usb_autopm_set_interface.....	88
usb_ifnum_to_if.....	89
usb_altnum_to_altsetting .....	90
usb_find_interface.....	91
usb_get_dev .....	92
usb_put_dev .....	93
usb_get_intf.....	94
usb_put_intf .....	95
usb_lock_device_for_reset.....	96
usb_find_device .....	97
usb_get_current_frame_number .....	98
usb_buffer_alloc.....	99
usb_buffer_free .....	100
usb_buffer_map .....	101
usb_buffer_dmaasync .....	102

usb_buffer_unmap .....	103
usb_buffer_map_sg .....	104
usb_buffer_dmasync_sg .....	105
usb_buffer_unmap_sg .....	106
usb_hub_tt_clear_buffer .....	107
usb_root_hub_lost_power .....	108
usb_reset_device .....	109
usb_reset_composite_device .....	111
<b>6. Host Controller APIs .....</b>	<b>113</b>
usb_calc_bus_time .....	113
usb_hcd_resume_root_hub .....	114
usb_bus_start_enum .....	115
usb_hcd_giveback_urb .....	116
usb_hc_died .....	117
usb_create_hcd .....	118
usb_add_hcd .....	119
usb_remove_hcd .....	120
usb_hcd_pci_probe .....	121
usb_hcd_pci_remove .....	122
usb_hcd_pci_suspend .....	123
usb_hcd_pci_resume .....	124
usb_hcd_pci_shutdown .....	125
hcd_buffer_create .....	125
hcd_buffer_destroy .....	126
<b>7. The USB Filesystem (usbfs) .....</b>	<b>129</b>
7.1. What files are in "usbfs"? .....	129
7.2. Mounting and Access Control .....	130
7.3. /proc/bus/usb/devices .....	131
7.4. /proc/bus/usb/BBB/DDD .....	132
7.5. Life Cycle of User Mode Drivers .....	132
7.6. The ioctl() Requests .....	133
7.6.1. Management/Status Requests .....	133
7.6.2. Synchronous I/O Support .....	136
7.6.3. Asynchronous I/O Support .....	138



# Chapter 1. Introduction to USB on Linux

A Universal Serial Bus (USB) is used to connect a host, such as a PC or workstation, to a number of peripheral devices. USB uses a tree structure, with the host as the root (the system's master), hubs as interior nodes, and peripherals as leaves (and slaves). Modern PCs support several such trees of USB devices, usually one USB 2.0 tree (480 Mbit/sec each) with a few USB 1.1 trees (12 Mbit/sec each) that are used when you connect a USB 1.1 device directly to the machine's "root hub".

That master/slave asymmetry was designed-in for a number of reasons, one being ease of use. It is not physically possible to assemble (legal) USB cables incorrectly: all upstream "to the host" connectors are the rectangular type (matching the sockets on root hubs), and all downstream connectors are the squarish type (or they are built into the peripheral). Also, the host software doesn't need to deal with distributed auto-configuration since the pre-designated master node manages all that. And finally, at the electrical level, bus protocol overhead is reduced by eliminating arbitration and moving scheduling into the host software.

USB 1.0 was announced in January 1996 and was revised as USB 1.1 (with improvements in hub specification and support for interrupt-out transfers) in September 1998. USB 2.0 was released in April 2000, adding high-speed transfers and transaction-translating hubs (used for USB 1.1 and 1.0 backward compatibility).

Kernel developers added USB support to Linux early in the 2.2 kernel series, shortly before 2.3 development forked. Updates from 2.3 were regularly folded back into 2.2 releases, which improved reliability and brought `/sbin/hotplug` support as well more drivers. Such improvements were continued in the 2.5 kernel series, where they added USB 2.0 support, improved performance, and made the host controller drivers (HCDs) more consistent. They also simplified the API (to make bugs less likely) and added internal "kernel doc" documentation.

Linux can run inside USB devices as well as on the hosts that control the devices. But USB device drivers running inside those peripherals don't do the same things as the ones running inside hosts, so they've been given a different name: *gadget drivers*. This document does not cover gadget drivers.





# Chapter 2. USB Host-Side API Model

Host-side drivers for USB devices talk to the "usbcore" APIs. There are two. One is intended for *general-purpose* drivers (exposed through driver frameworks), and the other is for drivers that are *part of the core*. Such core drivers include the *hub* driver (which manages trees of USB devices) and several different kinds of *host controller drivers*, which control individual busses.

The device model seen by USB drivers is relatively complex.

- USB supports four kinds of data transfers (control, bulk, interrupt, and isochronous). Two of them (control and bulk) use bandwidth as it's available, while the other two (interrupt and isochronous) are scheduled to provide guaranteed bandwidth.
- The device description model includes one or more "configurations" per device, only one of which is active at a time. Devices that are capable of high-speed operation must also support full-speed configurations, along with a way to ask about the "other speed" configurations which might be used.
- Configurations have one or more "interfaces", each of which may have "alternate settings". Interfaces may be standardized by USB "Class" specifications, or may be specific to a vendor or device.

USB device drivers actually bind to interfaces, not devices. Think of them as "interface drivers", though you may not see many devices where the distinction is important. *Most USB devices are simple, with only one configuration, one interface, and one alternate setting.*

- Interfaces have one or more "endpoints", each of which supports one type and direction of data transfer such as "bulk out" or "interrupt in". The entire configuration may have up to sixteen endpoints in each direction, allocated as needed among all the interfaces.
- Data transfer on USB is packetized; each endpoint has a maximum packet size. Drivers must often be aware of conventions such as flagging the end of bulk transfers using "short" (including zero length) packets.
- The Linux USB API supports synchronous calls for control and bulk messages. It also supports asynchronous calls for all kinds of data transfer, using request structures called "URBs" (USB Request Blocks).

Accordingly, the USB Core API exposed to device drivers covers quite a lot of territory. You'll probably need to consult the USB 2.0 specification, available online from [www.usb.org](http://www.usb.org) at no cost, as well as class or device specifications.

The only host-side drivers that actually touch hardware (reading/writing registers, handling IRQs, and so on) are the HCDs. In theory, all HCDs provide the same

functionality through the same API. In practice, that's becoming more true on the 2.5 kernels, but there are still differences that crop up especially with fault handling. Different controllers don't necessarily report the same aspects of failures, and recovery from faults (including software-induced ones like unlinking an URB) isn't yet fully consistent. Device driver authors should make a point of doing disconnect testing (while the device is active) with each different host controller driver, to make sure drivers don't have bugs of their own as well as to make sure they aren't relying on some HCD-specific behavior. (You will need external USB 1.1 and/or USB 2.0 hubs to perform all those tests.)

# Chapter 3. USB-Standard Types

In `<linux/usb/ch9.h>` you will find the USB data types defined in chapter 9 of the USB specification. These data types are used throughout USB, and in APIs including this host side API, gadget APIs, and usbfs.

## struct usb\_ctrlrequest

### LINUX

Kernel Hackers Manual September 2007

### Name

`struct usb_ctrlrequest` — SETUP data for a USB device control request

### Synopsis

```
struct usb_ctrlrequest {  
    __u8 bRequestType;  
    __u8 bRequest;  
    __le16 wValue;  
    __le16 wIndex;  
    __le16 wLength;  
};
```

### Members

`bRequestType`

matches the USB `bmRequestType` field

`bRequest`

matches the USB `bRequest` field

`wValue`

matches the USB `wValue` field (le16 byte order)

wIndex

matches the USB wIndex field (le16 byte order)

wLength

matches the USB wLength field (le16 byte order)

## **Description**

This structure is used to send control requests to a USB device. It matches the different fields of the USB 2.0 Spec section 9.3, table 9-2. See the USB spec for a fuller description of the different fields, and what they are used for.

Note that the driver for any interface can issue control requests. For most devices, interfaces don't coordinate with each other, so such requests may be made at any time.

# Chapter 4. Host-Side Data Types and Macros

The host side API exposes several layers to drivers, some of which are more necessary than others. These support lifecycle models for host side drivers and devices, and support passing buffers through usbcore to some HCD that performs the I/O for the device driver.

## struct usb\_host\_endpoint

### LINUX

Kernel Hackers Manual September 2007

### Name

struct usb\_host\_endpoint — host-side endpoint descriptor and queue

### Synopsis

```
struct usb_host_endpoint {
    struct usb_endpoint_descriptor desc;
    struct list_head urb_list;
    void * hcpriv;
    struct ep_device * ep_dev;
    unsigned char * extra;
    int extralen;
};
```

### Members

desc

descriptor for this endpoint, wMaxPacketSize in native byteorder

urb\_list

urbs queued to this endpoint; maintained by usbcore

hcpriv

for use by HCD; typically holds hardware dma queue head (QH) with one or more transfer descriptors (TDs) per urb

ep\_dev

ep\_device for sysfs info

extra

descriptors following this endpoint in the configuration

extralen

how many bytes of “extra” are valid

## Description

USB requests are always queued to a given endpoint, identified by a descriptor within an active interface in a given USB configuration.

# struct usb\_interface

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

struct usb\_interface — what usb device drivers talk to

## Synopsis

```
struct usb_interface {
    struct usb_host_interface * altsetting;
    struct usb_host_interface * cur_altsetting;
    unsigned num_altsetting;
    int minor;
    enum usb_interface_condition condition;
    unsigned is_active:1;
```

```
unsigned needs_remote_wakeup:1;
struct device dev;
struct device * usb_dev;
int pm_usage_cnt;
};
```

## Members

### altsetting

array of interface structures, one for each alternate setting that may be selected. Each one includes a set of endpoint configurations. They will be in no particular order.

### cur\_altsetting

the current altsetting.

### num\_altsetting

number of altsettings defined.

### minor

the minor number assigned to this interface, if this interface is bound to a driver that uses the USB major number. If this interface does not use the USB major, this field should be unused. The driver should set this value in the `probe` function of the driver, after it has been assigned a minor number from the USB core by calling `usb_register_dev`.

### condition

binding state of the interface: not bound, binding (in `probe`), bound to a driver, or unbinding (in `disconnect`)

### is\_active

flag set when the interface is bound and not suspended.

### needs\_remote\_wakeup

flag set when the driver requires remote-wakeup capability during autosuspend.

### dev

driver model's view of this device

`usb_dev`

if an interface is bound to the USB major, this will point to the sysfs representation for that device.

`pm_usage_cnt`

PM usage counter for this interface; autosuspend is not allowed unless the counter is 0.

## Description

USB device drivers attach to interfaces on a physical device. Each interface encapsulates a single high level function, such as feeding an audio stream to a speaker or reporting a change in a volume control. Many USB devices only have one interface. The protocol used to talk to an interface's endpoints can be defined in a usb "class" specification, or by a product's vendor. The (default) control endpoint is part of every interface, but is never listed among the interface's descriptors.

The driver that is bound to the interface can use standard driver model calls such as `dev_get_drvdata` on the `dev` member of this structure.

Each interface may have alternate settings. The initial configuration of a device sets `altsetting` 0, but the device driver can change that setting using `usb_set_interface`. Alternate settings are often used to control the use of periodic endpoints, such as by having different endpoints use different amounts of reserved USB bandwidth. All standards-conformant USB devices that use isochronous endpoints will use them in non-default settings.

The USB specification says that alternate setting numbers must run from 0 to one less than the total number of alternate settings. But some devices manage to mess this up, and the structures aren't necessarily stored in numerical order anyhow. Use `usb_altnum_to_altsetting` to look up an alternate setting in the `altsetting` array based on its number.

## struct `usb_interface_cache`

**LINUX**



## Name

`struct usb_interface_cache` — long-term representation of a device interface

## Synopsis

```
struct usb_interface_cache {
    unsigned num_altsetting;
    struct kref ref;
    struct usb_host_interface altsetting[0];
};
```

## Members

`num_altsetting`

number of altsettings defined.

`ref`

reference counter.

`altsetting[0]`

variable-length array of interface structures, one for each alternate setting that may be selected. Each one includes a set of endpoint configurations. They will be in no particular order.

## Description

These structures persist for the lifetime of a `usb_device`, unlike `struct usb_interface` (which persists only as long as its configuration is installed). The `altsetting` arrays can be accessed through these structures at any time, permitting comparison of configurations and providing support for the `/proc/bus/usb/devices` pseudo-file.

# struct usb\_host\_config

## LINUX

Kernel Hackers Manual September 2007

## Name

struct usb\_host\_config — representation of a device's configuration

## Synopsis

```
struct usb_host_config {
    struct usb_config_descriptor desc;
    char * string;
    struct usb_interface * interface[USB_MAXINTERFACES];
    struct usb_interface_cache * intf_cache[USB_MAXINTERFACES];
    unsigned char * extra;
    int extralen;
};
```

## Members

desc

the device's configuration descriptor.

string

pointer to the cached version of the iConfiguration string, if present for this configuration.

interface[USB\_MAXINTERFACES]

array of pointers to usb\_interface structures, one for each interface in the configuration. The number of interfaces is stored in desc.bNumInterfaces. These pointers are valid only while the the configuration is active.

intf\_cache[USB\_MAXINTERFACES]

array of pointers to usb\_interface\_cache structures, one for each interface in the configuration. These structures exist for the entire life of the device.

`extra`

pointer to buffer containing all extra descriptors associated with this configuration (those preceding the first interface descriptor).

`extralen`

length of the extra descriptors buffer.

## Description

USB devices may have multiple configurations, but only one can be active at any time. Each encapsulates a different operational environment; for example, a dual-speed device would have separate configurations for full-speed and high-speed operation. The number of configurations available is stored in the device descriptor as `bNumConfigurations`.

A configuration can contain multiple interfaces. Each corresponds to a different function of the USB device, and all are available whenever the configuration is active. The USB standard says that interfaces are supposed to be numbered from 0 to `desc.bNumInterfaces-1`, but a lot of devices get this wrong. In addition, the interface array is not guaranteed to be sorted in numerical order. Use `usb_ifnum_to_if` to look up an interface entry based on its number.

Device drivers should not attempt to activate configurations. The choice of which configuration to install is a policy decision based on such considerations as available power, functionality provided, and the user's desires (expressed through userspace tools). However, drivers can call `usb_reset_configuration` to reinitialize the current configuration and all its interfaces.

## `usb_interface_claimed`

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_interface_claimed` — returns true iff an interface is claimed

## Synopsis

```
int usb_interface_claimed (struct usb_interface * iface);
```

## Arguments

*iface*

the interface being checked

## Description

Returns true (nonzero) iff the interface is claimed, else false (zero). Callers must own the driver model's usb bus readlock. So driver `probe` entries don't need extra locking, but other call contexts may need to explicitly claim that lock.

## usb\_make\_path

### LINUX

Kernel Hackers Manual September 2007

## Name

`usb_make_path` — returns stable device path in the usb tree

## Synopsis

```
int usb_make_path (struct usb_device * dev, char * buf,  
size_t size);
```

## Arguments

*dev*

the device whose path is being constructed

*buf*

where to put the string

*size*

how big is “buf”?

## Description

Returns length of the string (> 0) or negative if size was too small.

This identifier is intended to be “stable”, reflecting physical paths in hardware such as physical bus addresses for host controllers or ports on USB hubs. That makes it stay the same until systems are physically reconfigured, by re-cabling a tree of USB devices or by moving USB host controllers. Adding and removing devices, including virtual root hubs in host controller driver modules, does not change these path identifiers; neither does rebooting or re-enumerating. These are more useful identifiers than changeable (“unstable”) ones like bus numbers or device addresses.

With a partial exception for devices connected to USB 2.0 root hubs, these identifiers are also predictable. So long as the device tree isn’t changed, plugging any USB device into a given hub port always gives it the same path. Because of the use of “companion” controllers, devices connected to ports on USB 2.0 root hubs (EHCI host controllers) will get one path ID if they are high speed, and a different one if they are full or low speed.

## usb\_endpoint\_dir\_in

**LINUX**

## Name

`usb_endpoint_dir_in` — check if the endpoint has IN direction

## Synopsis

```
int usb_endpoint_dir_in (const struct usb_endpoint_descriptor  
* epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint is of type IN, otherwise it returns false.

# usb\_endpoint\_dir\_out

## LINUX

## Name

`usb_endpoint_dir_out` — check if the endpoint has OUT direction

## Synopsis

```
int usb_endpoint_dir_out (const struct usb_endpoint_descriptor
* epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint is of type OUT, otherwise it returns false.

# usb\_endpoint\_xfer\_bulk

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_endpoint_xfer_bulk` — check if the endpoint has bulk transfer type

## Synopsis

```
int usb_endpoint_xfer_bulk (const struct
usb_endpoint_descriptor * epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint is of type bulk, otherwise it returns false.

# usb\_endpoint\_xfer\_control

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_endpoint_xfer_control` — check if the endpoint has control transfer type

## Synopsis

```
int usb_endpoint_xfer_control (const struct  
usb_endpoint_descriptor * epd);
```

## Arguments

*epd*

endpoint to be checked



## Description

Returns true if the endpoint is of type control, otherwise it returns false.

# usb\_endpoint\_xfer\_int

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_endpoint_xfer_int` — check if the endpoint has interrupt transfer type

## Synopsis

```
int usb_endpoint_xfer_int (const struct  
usb_endpoint_descriptor * epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint is of type interrupt, otherwise it returns false.

## usb\_endpoint\_xfer\_isoc

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_endpoint_xfer_isoc` — check if the endpoint has isochronous transfer type

### Synopsis

```
int usb_endpoint_xfer_isoc (const struct  
usb_endpoint_descriptor * epd);
```

### Arguments

*epd*

endpoint to be checked

### Description

Returns true if the endpoint is of type isochronous, otherwise it returns false.

## usb\_endpoint\_is\_bulk\_in

### LINUX

## Name

`usb_endpoint_is_bulk_in` — check if the endpoint is bulk IN

## Synopsis

```
int usb_endpoint_is_bulk_in (const struct  
usb_endpoint_descriptor * epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint has bulk transfer type and IN direction, otherwise it returns false.

# usb\_endpoint\_is\_bulk\_out

## LINUX

## Name

`usb_endpoint_is_bulk_out` — check if the endpoint is bulk OUT

## Synopsis

```
int usb_endpoint_is_bulk_out (const struct  
usb_endpoint_descriptor * epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint has bulk transfer type and OUT direction, otherwise it returns false.

## usb\_endpoint\_is\_int\_in

### LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_endpoint_is_int_in` — check if the endpoint is interrupt IN

## Synopsis

```
int usb_endpoint_is_int_in (const struct  
usb_endpoint_descriptor * epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint has interrupt transfer type and IN direction, otherwise it returns false.

# usb\_endpoint\_is\_int\_out

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_endpoint_is_int_out` — check if the endpoint is interrupt OUT

## Synopsis

```
int usb_endpoint_is_int_out (const struct  
usb_endpoint_descriptor * epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint has interrupt transfer type and OUT direction, otherwise it returns false.

# usb\_endpoint\_is\_isoc\_in

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_endpoint_is_isoc_in` — check if the endpoint is isochronous IN

## Synopsis

```
int usb_endpoint_is_isoc_in (const struct  
usb_endpoint_descriptor * epd);
```

## Arguments

*epd*

endpoint to be checked

## Description

Returns true if the endpoint has isochronous transfer type and IN direction, otherwise it returns false.

# usb\_endpoint\_is\_isoc\_out

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_endpoint_is_isoc_out` — check if the endpoint is isochronous OUT

### Synopsis

```
int usb_endpoint_is_isoc_out (const struct  
usb_endpoint_descriptor * epd);
```

### Arguments

*epd*

endpoint to be checked

### Description

Returns true if the endpoint has isochronous transfer type and OUT direction, otherwise it returns false.

## USB\_DEVICE

## LINUX

## Name

`USB_DEVICE` — macro used to describe a specific usb device

## Synopsis

```
USB_DEVICE ( vend, prod );
```

## Arguments

*vend*

the 16 bit USB Vendor ID

*prod*

the 16 bit USB Product ID

## Description

This macro is used to create a struct `usb_device_id` that matches a specific device.

# USB\_DEVICE\_VER

## LINUX

## Name

`USB_DEVICE_VER` — macro used to describe a specific usb device with a



## Synopsis

```
USB_DEVICE_VER ( vend, prod, lo, hi );
```

## Arguments

*vend*

the 16 bit USB Vendor ID

*prod*

the 16 bit USB Product ID

*lo*

the bcdDevice\_lo value

*hi*

the bcdDevice\_hi value

## Description

This macro is used to create a struct `usb_device_id` that matches a specific device, with a version range.

## Description

This macro is used to create a struct `usb_device_id` that matches a specific device, with a version range.

# USB\_DEVICE\_INFO

**LINUX**

## Name

USB\_DEVICE\_INFO — macro used to describe a class of usb devices

## Synopsis

```
USB_DEVICE_INFO ( cl, sc, pr );
```

## Arguments

*cl*

bDeviceClass value

*sc*

bDeviceSubClass value

*pr*

bDeviceProtocol value

## Description

This macro is used to create a struct `usb_device_id` that matches a specific class of devices.

# USB\_INTERFACE\_INFO

**LINUX**

## Name

USB\_INTERFACE\_INFO — macro used to describe a class of usb interfaces

## Synopsis

```
USB_INTERFACE_INFO ( cl,  sc,  pr );
```

## Arguments

*cl*

bInterfaceClass value

*sc*

bInterfaceSubClass value

*pr*

bInterfaceProtocol value

## Description

This macro is used to create a struct `usb_device_id` that matches a specific class of interfaces.

## struct `usbdrv_wrap`

**LINUX**

## Name

`struct usbdrv_wrap` — wrapper for driver-model structure

## Synopsis

```
struct usbdrv_wrap {
    struct device_driver driver;
    int for_devices;
};
```

## Members

`driver`

The driver-model core driver structure.

`for_devices`

Non-zero for device drivers, 0 for interface drivers.

# struct usb\_driver

## LINUX

## Name

`struct usb_driver` — identifies USB interface driver to usbcore

## Synopsis

```
struct usb_driver {
    const char * name;
```

```
int (* probe) (struct usb_interface *intf, const struct usb_device_id *id);
void (* disconnect) (struct usb_interface *intf);
int (* ioctl) (struct usb_interface *intf, unsigned int code, void *buf);
int (* suspend) (struct usb_interface *intf, pm_message_t message);
int (* resume) (struct usb_interface *intf);
void (* pre_reset) (struct usb_interface *intf);
void (* post_reset) (struct usb_interface *intf);
const struct usb_device_id * id_table;
struct usb_dynids dynids;
struct usbdrv_wrap drvwrap;
unsigned int no_dynamic_id:1;
unsigned int supports_autosuspend:1;
};
```

## Members

### name

The driver name should be unique among USB drivers, and should normally be the same as the module name.

### probe

Called to see if the driver is willing to manage a particular interface on a device. If it is, probe returns zero and uses `dev_set_drvdata` to associate driver-specific data with the interface. It may also use `usb_set_interface` to specify the appropriate altsetting. If unwilling to manage the interface, return a negative `errno` value.

### disconnect

Called when the interface is no longer accessible, usually because its device has been (or is being) disconnected or the driver module is being unloaded.

### ioctl

Used for drivers that want to talk to userspace through the “usbfs” filesystem. This lets devices provide ways to expose information to user space regardless of where they do (or don’t) show up otherwise in the filesystem.

### suspend

Called when the device is going to be suspended by the system.

### resume

Called when the device is being resumed by the system.

`pre_reset`

Called by `usb_reset_composite_device` when the device is about to be reset.

`post_reset`

Called by `usb_reset_composite_device` after the device has been reset.

`id_table`

USB drivers use ID table to support hotplugging. Export this with `MODULE_DEVICE_TABLE(usb,...)`. This must be set or your driver's probe function will never get called.

`dynids`

used internally to hold the list of dynamically added device ids for this driver.

`drvwrap`

Driver-model core structure wrapper.

`no_dynamic_id`

if set to 1, the USB core will not allow dynamic ids to be added to this driver by preventing the sysfs file from being created.

`supports_autosuspend`

if set to 0, the USB core will not allow autosuspend for interfaces bound to this driver.

## Description

USB interface drivers must provide a `name`, `probe` and `disconnect` methods, and an `id_table`. Other driver fields are optional.

The `id_table` is used in hotplugging. It holds a set of descriptors, and specialized data may be associated with each entry. That table is used by both user and kernel mode hotplugging support.

The `probe` and `disconnect` methods are called in a context where they can sleep, but they should avoid abusing the privilege. Most work to connect to a device should be done when the device is opened, and undone at the last close. The `disconnect` code needs to address concurrency issues with respect to `open` and `close` methods, as well as forcing all pending I/O requests to complete (by unlinking them as necessary, and blocking until the unlinks complete).

# struct usb\_device\_driver

## LINUX

Kernel Hackers Manual September 2007

## Name

struct usb\_device\_driver — identifies USB device driver to usbcore

## Synopsis

```
struct usb_device_driver {
    const char * name;
    int (* probe) (struct usb_device *udev);
    void (* disconnect) (struct usb_device *udev);
    int (* suspend) (struct usb_device *udev, pm_message_t message);
    int (* resume) (struct usb_device *udev);
    struct usbdrv_wrap drvwrap;
    unsigned int supports_autosuspend:1;
};
```

## Members

### name

The driver name should be unique among USB drivers, and should normally be the same as the module name.

### probe

Called to see if the driver is willing to manage a particular device. If it is, probe returns zero and uses `dev_set_drvdata` to associate driver-specific data with the device. If unwilling to manage the device, return a negative `errno` value.

### disconnect

Called when the device is no longer accessible, usually because it has been (or is being) disconnected or the driver's module is being unloaded.

suspend

Called when the device is going to be suspended by the system.

resume

Called when the device is being resumed by the system.

drvwrap

Driver-model core structure wrapper.

supports\_autosuspend

if set to 0, the USB core will not allow autosuspend for devices bound to this driver.

## Description

USB drivers must provide all the fields listed above except drvwrap.

# struct usb\_class\_driver

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

struct usb\_class\_driver — identifies a USB driver that wants to use the USB major number

## Synopsis

```
struct usb_class_driver {  
    char * name;  
    const struct file_operations * fops;  
    int minor_base;  
};
```



## Members

name

the usb class device name for this driver. Will show up in sysfs.

fops

pointer to the struct file\_operations of this driver.

minor\_base

the start of the minor range for this driver.

## Description

This structure is used for the `usb_register_dev` and `usb_unregister_dev` functions, to consolidate a number of the parameters used for them.

## struct urb

### LINUX

Kernel Hackers ManualSeptember 2007

## Name

struct urb — USB Request Block

## Synopsis

```
struct urb {
    struct list_head urb_list;
    struct usb_device * dev;
    unsigned int pipe;
    int status;
    unsigned int transfer_flags;
    void * transfer_buffer;
    dma_addr_t transfer_dma;
    int transfer_buffer_length;
```

```
int actual_length;
unsigned char * setup_packet;
dma_addr_t setup_dma;
int start_frame;
int number_of_packets;
int interval;
int error_count;
void * context;
usb_complete_t complete;
struct usb_iso_packet_descriptor iso_frame_desc[0];
};
```

## Members

### urb\_list

For use by current owner of the URB.

### dev

Identifies the USB device to perform the request.

### pipe

Holds endpoint number, direction, type, and more. Create these values with the eight macros available; `usb_{snd,rcv}TYPEpipe(dev,endpoint)`, where the TYPE is “ctrl” (control), “bulk”, “int” (interrupt), or “iso” (isochronous). For example `usb_sndbulkipipe` or `usb_rcvintpipe`. Endpoint numbers range from zero to fifteen. Note that “in” endpoint two is a different endpoint (and pipe) from “out” endpoint two. The current configuration controls the existence, type, and maximum packet size of any given endpoint.

### status

This is read in non-iso completion functions to get the status of the particular request. ISO requests only use it to tell whether the URB was unlinked; detailed status for each frame is in the fields of the `iso_frame_desc`.

### transfer\_flags

A variety of flags may be used to affect how URB submission, unlinking, or operation are handled. Different kinds of URB can use different flags.

### transfer\_buffer

This identifies the buffer to (or from) which the I/O request will be performed (unless `URB_NO_TRANSFER_DMA_MAP` is set). This buffer must be

suitable for DMA; allocate it with `kmalloc` or equivalent. For transfers to “in” endpoints, contents of this buffer will be modified. This buffer is used for the data stage of control transfers.

`transfer_dma`

When `transfer_flags` includes `URB_NO_TRANSFER_DMA_MAP`, the device driver is saying that it provided this DMA address, which the host controller driver should use in preference to the `transfer_buffer`.

`transfer_buffer_length`

How big is `transfer_buffer`. The transfer may be broken up into chunks according to the current maximum packet size for the endpoint, which is a function of the configuration and is encoded in the pipe. When the length is zero, neither `transfer_buffer` nor `transfer_dma` is used.

`actual_length`

This is read in non-iso completion functions, and it tells how many bytes (out of `transfer_buffer_length`) were transferred. It will normally be the same as requested, unless either an error was reported or a short read was performed. The `URB_SHORT_NOT_OK` transfer flag may be used to make such short reads be reported as errors.

`setup_packet`

Only used for control transfers, this points to eight bytes of setup data. Control transfers always start by sending this data to the device. Then `transfer_buffer` is read or written, if needed.

`setup_dma`

For control transfers with `URB_NO_SETUP_DMA_MAP` set, the device driver has provided this DMA address for the setup packet. The host controller driver should use this in preference to `setup_packet`.

`start_frame`

Returns the initial frame for isochronous transfers.

`number_of_packets`

Lists the number of ISO transfer buffers.

`interval`

Specifies the polling interval for interrupt or isochronous transfers. The units are frames (milliseconds) for full and low speed devices, and microframes (1/8 millisecond) for highspeed ones.

`error_count`

Returns the number of ISO transfers that reported errors.

`context`

For use in completion functions. This normally points to request-specific driver context.

`complete`

Completion handler. This URB is passed as the parameter to the completion function. The completion function may then do what it likes with the URB, including resubmitting or freeing it.

`iso_frame_desc[0]`

Used to provide arrays of ISO transfer buffers and to collect the transfer status for each buffer.

## Description

This structure identifies USB transfer requests. URBs must be allocated by calling `usb_alloc_urb` and freed with a call to `usb_free_urb`. Initialization may be done using various `usb_fill*_urb` functions. URBs are submitted using `usb_submit_urb`, and pending requests may be canceled using `usb_unlink_urb` or `usb_kill_urb`.

## Data Transfer Buffers

Normally drivers provide I/O buffers allocated with `kmalloc` or otherwise taken from the general page pool. That is provided by `transfer_buffer` (control requests also use `setup_packet`), and host controller drivers perform a dma mapping (and unmapping) for each buffer transferred. Those mapping operations can be expensive on some platforms (perhaps using a dma bounce buffer or talking to an IOMMU), although they're cheap on commodity x86 and ppc hardware.

Alternatively, drivers may pass the `URB_NO_XXX_DMA_MAP` transfer flags, which tell the host controller driver that no such mapping is needed since the device driver is DMA-aware. For example, a device driver might allocate a DMA buffer with `usb_buffer_alloc` or call `usb_buffer_map`. When these transfer flags are provided, host controller drivers will attempt to use the dma addresses found in the `transfer_dma` and/or `setup_dma` fields rather than determining a dma address

themselves. (Note that `transfer_buffer` and `setup_packet` must still be set because not all host controllers use DMA, nor do virtual root hubs).

## Initialization

All URBs submitted must initialize the `dev`, `pipe`, `transfer_flags` (may be zero), and `complete` fields. All URBs must also initialize `transfer_buffer` and `transfer_buffer_length`. They may provide the `URB_SHORT_NOT_OK` transfer flag, indicating that short reads are to be treated as errors; that flag is invalid for write requests.

Bulk URBs may use the `URB_ZERO_PACKET` transfer flag, indicating that bulk OUT transfers should always terminate with a short packet, even if it means adding an extra zero length packet.

Control URBs must provide a `setup_packet`. The `setup_packet` and `transfer_buffer` may each be mapped for DMA or not, independently of the other. The `transfer_flags` bits `URB_NO_TRANSFER_DMA_MAP` and `URB_NO_SETUP_DMA_MAP` indicate which buffers have already been mapped. `URB_NO_SETUP_DMA_MAP` is ignored for non-control URBs.

Interrupt URBs must provide an interval, saying how often (in milliseconds or, for highspeed devices, 125 microsecond units) to poll for transfers. After the URB has been submitted, the interval field reflects how the transfer was actually scheduled. The polling interval may be more frequent than requested. For example, some controllers have a maximum interval of 32 milliseconds, while others support intervals of up to 1024 milliseconds. Isochronous URBs also have transfer intervals. (Note that for isochronous endpoints, as well as high speed interrupt endpoints, the encoding of the transfer interval in the endpoint descriptor is logarithmic. Device drivers must convert that value to linear units themselves.)

Isochronous URBs normally use the `URB_ISO_ASAP` transfer flag, telling the host controller to schedule the transfer as soon as bandwidth utilization allows, and then set `start_frame` to reflect the actual frame selected during submission. Otherwise drivers must specify the `start_frame` and handle the case where the transfer can't begin then. However, drivers won't know how bandwidth is currently allocated, and while they can find the current frame using `usb_get_current_frame_number()` they can't know the range for that frame number. (Ranges for frame counter values are HC-specific, and can go from 256 to 65536 frames from "now".)

Isochronous URBs have a different data transfer model, in part because the quality of service is only "best effort". Callers provide specially allocated URBs, with `number_of_packets` worth of `iso_frame_desc` structures at the end. Each such packet is an individual ISO transfer. Isochronous URBs are normally queued, submitted by drivers to arrange that transfers are at least double buffered, and then

explicitly resubmitted in completion handlers, so that data (such as audio or video) streams at as constant a rate as the host controller scheduler can support.

## Completion Callbacks

The completion callback is made `in_interrupt`, and one of the first things that a completion handler should do is check the status field. The status field is provided for all URBs. It is used to report unlinked URBs, and status for all non-ISO transfers. It should not be examined before the URB is returned to the completion handler.

The context field is normally used to link URBs back to the relevant driver or request state.

When the completion callback is invoked for non-isochronous URBs, the `actual_length` field tells how many bytes were transferred. This field is updated even when the URB terminated with an error or was unlinked.

ISO transfer status is reported in the status and `actual_length` fields of the `iso_frame_desc` array, and the number of errors is reported in `error_count`. Completion callbacks for ISO transfers will normally (re)submit URBs to ensure a constant transfer rate.

Note that even fields marked “public” should not be touched by the driver when the urb is owned by the hcd, that is, since the call to `usb_submit_urb` till the entry into the completion routine.

## usb\_fill\_control\_urb

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_fill_control_urb` — initializes a control urb

## Synopsis

```
void usb_fill_control_urb (struct urb * urb, struct usb_device  
* dev, unsigned int pipe, unsigned char * setup_packet, void *  
transfer_buffer, int buffer_length, usb_complete_t  
complete_fn, void * context);
```

## Arguments

*urb*

pointer to the urb to initialize.

*dev*

pointer to the struct usb\_device for this urb.

*pipe*

the endpoint pipe

*setup\_packet*

pointer to the setup\_packet buffer

*transfer\_buffer*

pointer to the transfer buffer

*buffer\_length*

length of the transfer buffer

*complete\_fn*

pointer to the usb\_complete\_t function

*context*

what to set the urb context to.

## Description

Initializes a control urb with the proper information needed to submit it to a device.

# usb\_fill\_bulk\_urb

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_fill_bulk_urb` — macro to help initialize a bulk urb

### Synopsis

```
void usb_fill_bulk_urb (struct urb * urb, struct usb_device *  
dev, unsigned int pipe, void * transfer_buffer, int  
buffer_length, usb_complete_t complete_fn, void * context);
```

### Arguments

*urb*

pointer to the urb to initialize.

*dev*

pointer to the struct `usb_device` for this urb.

*pipe*

the endpoint pipe

*transfer\_buffer*

pointer to the transfer buffer

*buffer\_length*

length of the transfer buffer



*complete\_fn*

pointer to the `usb_complete_t` function

*context*

what to set the urb context to.

## Description

Initializes a bulk urb with the proper information needed to submit it to a device.

# usb\_fill\_int\_urb

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_fill_int_urb` — macro to help initialize a interrupt urb

## Synopsis

```
void usb_fill_int_urb (struct urb * urb, struct usb_device *  
dev, unsigned int pipe, void * transfer_buffer, int  
buffer_length, usb_complete_t complete_fn, void * context, int  
interval);
```

## Arguments

*urb*

pointer to the urb to initialize.

*dev*

pointer to the struct `usb_device` for this urb.

*pipe*

the endpoint pipe

*transfer\_buffer*

pointer to the transfer buffer

*buffer\_length*

length of the transfer buffer

*complete\_fn*

pointer to the `usb_complete_t` function

*context*

what to set the urb context to.

*interval*

what to set the urb interval to, encoded like the endpoint descriptor's `bInterval` value.

## Description

Initializes a interrupt urb with the proper information needed to submit it to a device. Note that high speed interrupt endpoints use a logarithmic encoding of the endpoint interval, and express polling intervals in microframes (eight per millisecond) rather than in frames (one per millisecond).

## struct `usb_sg_request`

**LINUX**

## Name

`struct usb_sg_request` — support for scatter/gather I/O

## Synopsis

```
struct usb_sg_request {  
    int status;  
    size_t bytes;  
};
```

## Members

`status`

zero indicates success, else negative `errno`

`bytes`

counts bytes transferred.

## Description

These requests are initialized using `usb_sg_init`, and then are used as request handles passed to `usb_sg_wait` or `usb_sg_cancel`. Most members of the request object aren't for driver access.

The `status` and `bytecount` values are valid only after `usb_sg_wait` returns. If the `status` is zero, then the `bytecount` matches the total from the request.

After an error completion, drivers may need to clear a halt condition on the endpoint.



# Chapter 5. USB Core APIs

There are two basic I/O models in the USB API. The most elemental one is asynchronous: drivers submit requests in the form of an URB, and the URB's completion callback handle the next step. All USB transfer types support that model, although there are special cases for control URBs (which always have setup and status stages, but may not have a data stage) and isochronous URBs (which allow large packets and include per-packet fault reports). Built on top of that is synchronous API support, where a driver calls a routine that allocates one or more URBs, submits them, and waits until they complete. There are synchronous wrappers for single-buffer control and bulk transfers (which are awkward to use in some driver disconnect scenarios), and for scatterlist based streaming i/o (bulk or interrupt).

USB drivers need to provide buffers that can be used for DMA, although they don't necessarily need to provide the DMA mapping themselves. There are APIs to use used when allocating DMA buffers, which can prevent use of bounce buffers on some systems. In some cases, drivers may be able to rely on 64bit DMA to eliminate another kind of bounce buffer.

## usb\_init\_urb

### LINUX

Kernel Hackers ManualSeptember 2007

### Name

`usb_init_urb` — initializes a urb so that it can be used by a USB driver

### Synopsis

```
void usb_init_urb (struct urb * urb);
```

## Arguments

*urb*

pointer to the urb to initialize

## Description

Initializes a urb so that the USB subsystem can use it properly.

If a urb is created with a call to `usb_alloc_urb` it is not necessary to call this function. Only use this if you allocate the space for a struct urb on your own. If you call this function, be careful when freeing the memory for your urb that it is no longer in use by the USB core.

Only use this function if you *\_really\_* understand what you are doing.

## usb\_alloc\_urb

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_alloc_urb` — creates a new urb for a USB driver to use

### Synopsis

```
struct urb * usb_alloc_urb (int iso_packets, gfp_t mem_flags);
```

## Arguments

*iso\_packets*

number of iso packets for this urb

*mem\_flags*

the type of memory to allocate, see `kmalloc` for a list of valid options for this.

## Description

Creates an urb for the USB driver to use, initializes a few internal structures, incrementes the usage counter, and returns a pointer to it.

If no memory is available, NULL is returned.

If the driver want to use this urb for interrupt, control, or bulk endpoints, pass '0' as the number of iso packets.

The driver must call `usb_free_urb` when it is finished with the urb.

## usb\_free\_urb

### LINUX

Kernel Hackers ManualSeptember 2007

### Name

`usb_free_urb` — frees the memory used by a urb when all users of it are finished

### Synopsis

```
void usb_free_urb (struct urb * urb);
```

## Arguments

*urb*

pointer to the urb to free, may be NULL

## Description

Must be called when a user of a urb is finished with it. When the last user of the urb calls this function, the memory of the urb is freed.

## Note

The transfer buffer associated with the urb is not freed, that must be done elsewhere.

# usb\_get\_urb

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_get_urb` — increments the reference count of the urb

## Synopsis

```
struct urb * usb_get_urb (struct urb * urb);
```



## Arguments

*urb*

pointer to the urb to modify, may be NULL

## Description

This must be called whenever a urb is transferred from a device driver to a host controller driver. This allows proper reference counting to happen for urbs.

A pointer to the urb with the incremented reference counter is returned.

# usb\_submit\_urb

## LINUX

Kernel Hackers Manual September 2007

## Name

`usb_submit_urb` — issue an asynchronous transfer request for an endpoint

## Synopsis

```
int usb_submit_urb (struct urb * urb, gfp_t mem_flags);
```

## Arguments

*urb*

pointer to the urb describing the request

*mem\_flags*

the type of memory to allocate, see `kmalloc` for a list of valid options for this.

## Description

This submits a transfer request, and transfers control of the URB describing that request to the USB subsystem. Request completion will be indicated later, asynchronously, by calling the completion handler. The three types of completion are success, error, and unlink (a software-induced fault, also called “request cancellation”).

URBs may be submitted in interrupt context.

The caller must have correctly initialized the URB before submitting it. Functions such as `usb_fill_bulk_urb` and `usb_fill_control_urb` are available to ensure that most fields are correctly initialized, for the particular kind of transfer, although they will not initialize any transfer flags.

Successful submissions return 0; otherwise this routine returns a negative error number. If the submission is successful, the `complete` callback from the URB will be called exactly once, when the USB core and Host Controller Driver (HCD) are finished with the URB. When the completion function is called, control of the URB is returned to the device driver which issued the request. The completion handler may then immediately free or reuse that URB.

With few exceptions, USB device drivers should never access URB fields provided by `usbcore` or the HCD until its `complete` is called. The exceptions relate to periodic transfer scheduling. For both interrupt and isochronous urbs, as part of successful URB submission `urb->interval` is modified to reflect the actual transfer period used (normally some power of two units). And for isochronous urbs, `urb->start_frame` is modified to reflect when the URB’s transfers were scheduled to start. Not all isochronous transfer scheduling policies will work, but most host controller drivers should easily handle ISO queues going from now until 10-200 msec into the future.

For control endpoints, the synchronous `usb_control_msg` call is often used (in non-interrupt context) instead of this call. That is often used through convenience wrappers, for the requests that are standardized in the USB 2.0 specification. For bulk endpoints, a synchronous `usb_bulk_msg` call is available.

## Request Queuing

URBs may be submitted to endpoints before previous ones complete, to minimize the impact of interrupt latencies and system overhead on data throughput. With that queuing policy, an endpoint's queue would never be empty. This is required for continuous isochronous data streams, and may also be required for some kinds of interrupt transfers. Such queuing also maximizes bandwidth utilization by letting USB controllers start work on later requests before driver software has finished the completion processing for earlier (successful) requests.

As of Linux 2.6, all USB endpoint transfer queues support depths greater than one. This was previously a HCD-specific behavior, except for ISO transfers. Non-isochronous endpoint queues are inactive during cleanup after faults (transfer errors or cancellation).

## Reserved Bandwidth Transfers

Periodic transfers (interrupt or isochronous) are performed repeatedly, using the interval specified in the urb. Submitting the first urb to the endpoint reserves the bandwidth necessary to make those transfers. If the USB subsystem can't allocate sufficient bandwidth to perform the periodic request, submitting such a periodic request should fail.

Device drivers must explicitly request that repetition, by ensuring that some URB is always on the endpoint's queue (except possibly for short periods during completion callacks). When there is no longer an urb queued, the endpoint's bandwidth reservation is canceled. This means drivers can use their completion handlers to ensure they keep bandwidth they need, by reinitializing and resubmitting the just-completed urb until the driver longer needs that periodic bandwidth.

## Memory Flags

The general rules for how to decide which `mem_flags` to use are the same as for `kmalloc`. There are four different possible values; `GFP_KERNEL`, `GFP_NOFS`, `GFP_NOIO` and `GFP_ATOMIC`.

`GFP_NOFS` is not ever used, as it has not been implemented yet.

`GFP_ATOMIC` is used when (a) you are inside a completion handler, an interrupt, bottom half, tasklet or timer, or (b) you are holding a spinlock or rwlock (does not apply to semaphores), or (c) `current->state != TASK_RUNNING`, this is the case only after you've changed it.

`GFP_NOIO` is used in the block io path and error handling of storage devices.

All other situations use `GFP_KERNEL`.

Some more specific rules for `mem_flags` can be inferred, such as (1) `start_xmit`, `timeout`, and receive methods of network drivers must use `GFP_ATOMIC` (they are called with a spinlock held); (2) `queuecommand` methods of scsi drivers must use `GFP_ATOMIC` (also called with a spinlock held); (3) If you use a kernel thread with a network driver you must use `GFP_NOIO`, unless (b) or (c) apply; (4) after you have done a `down` you can use `GFP_KERNEL`, unless (b) or (c) apply or you are in a storage driver's block io path; (5) USB probe and disconnect can use `GFP_KERNEL` unless (b) or (c) apply; and (6) changing firmware on a running storage or net device uses `GFP_NOIO`, unless b) or c) apply

## usb\_unlink\_urb

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_unlink_urb` — abort/cancel a transfer request for an endpoint

### Synopsis

```
int usb_unlink_urb (struct urb * urb);
```

### Arguments

*urb*

pointer to urb describing a previously submitted request, may be NULL

### Description

This routine cancels an in-progress request. URBs complete only once per submission, and may be canceled only once per submission. Successful cancellation

means the requests's completion handler will be called with a status code indicating that the request has been canceled (rather than any other code) and will quickly be removed from host controller data structures.

This request is always asynchronous. Success is indicated by returning `-EINPROGRESS`, at which time the URB will normally have been unlinked but not yet given back to the device driver. When it is called, the completion function will see `urb->status == -ECONNRESET`. Failure is indicated by any other return value. Unlinking will fail when the URB is not currently "linked" (i.e., it was never submitted, or it was unlinked before, or the hardware is already finished with it), even if the completion handler has not yet run.

## Unlinking and Endpoint Queues

Host Controller Drivers (HCDs) place all the URBs for a particular endpoint in a queue. Normally the queue advances as the controller hardware processes each request. But when an URB terminates with an error its queue stops, at least until that URB's completion routine returns. It is guaranteed that the queue will not restart until all its unlinked URBs have been fully retired, with their completion routines run, even if that's not until some time after the original completion handler returns. Normally the same behavior and guarantees apply when an URB terminates because it was unlinked; however if an URB is unlinked before the hardware has started to execute it, then its queue is not guaranteed to stop until all the preceding URBs have completed.

This means that USB device drivers can safely build deep queues for large or complex transfers, and clean them up reliably after any sort of aborted transfer by unlinking all pending URBs at the first fault.

Note that an URB terminating early because a short packet was received will count as an error if and only if the `URB_SHORT_NOT_OK` flag is set. Also, that all unlinks performed in any URB completion handler must be asynchronous.

Queues for isochronous endpoints are treated differently, because they advance at fixed rates. Such queues do not stop when an URB is unlinked. An unlinked URB may leave a gap in the stream of packets. It is undefined whether such gaps can be filled in.

When a control URB terminates with an error, it is likely that the status stage of the transfer will not take place, even if it is merely a soft error resulting from a short-packet with `URB_SHORT_NOT_OK` set.

# usb\_kill\_urb

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_kill_urb` — cancel a transfer request and wait for it to finish

### Synopsis

```
void usb_kill_urb (struct urb * urb);
```

### Arguments

*urb*

pointer to URB describing a previously submitted request, may be NULL

### Description

This routine cancels an in-progress request. It is guaranteed that upon return all completion handlers will have finished and the URB will be totally idle and available for reuse. These features make this an ideal way to stop I/O in a `disconnect` callback or `close` function. If the request has not already finished or been unlinked the completion handler will see `urb->status == -ENOENT`.

While the routine is running, attempts to resubmit the URB will fail with error `-EPERM`. Thus even if the URB's completion handler always tries to resubmit, it will not succeed and the URB will become idle.

This routine may not be used in an interrupt context (such as a bottom half or a completion handler), or when holding a spinlock, or in other situations where the caller can't `schedule`.

# usb\_control\_msg

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_control_msg` — Builds a control urb, sends it off and waits for completion

### Synopsis

```
int usb_control_msg (struct usb_device * dev, unsigned int
pipe, __u8 request, __u8 requesttype, __u16 value, __u16
index, void * data, __u16 size, int timeout);
```

### Arguments

*dev*

pointer to the usb device to send the message to

*pipe*

endpoint “pipe” to send the message to

*request*

USB message request value

*requesttype*

USB message request type value

*value*

USB message value

*index*

USB message index value

*data*

pointer to the data to send

*size*

length in bytes of the data to send

*timeout*

time in msec to wait for the message to complete before timing out (if 0 the wait is forever)

## Context

!in\_interrupt ()

## Description

This function sends a simple control message to a specified endpoint and waits for the message to complete, or timeout.

If successful, it returns the number of bytes transferred, otherwise a negative error number.

Don't use this function from within an interrupt context, like a bottom half handler. If you need an asynchronous message, or need to send a message from within interrupt context, use `usb_submit_urb`. If a thread in your driver uses this call, make sure your `disconnect` method can wait for it to complete. Since you don't have a handle on the URB used, you can't cancel the request.

# usb\_interrupt\_msg

**LINUX**

Kernel Hackers Manual September 2007

## Name

`usb_interrupt_msg` — Builds an interrupt urb, sends it off and waits for completion



## Synopsis

```
int usb_interrupt_msg (struct usb_device * usb_dev, unsigned
int pipe, void * data, int len, int * actual_length, int
timeout);
```

## Arguments

*usb\_dev*

pointer to the usb device to send the message to

*pipe*

endpoint “pipe” to send the message to

*data*

pointer to the data to send

*len*

length in bytes of the data to send

*actual\_length*

pointer to a location to put the actual length transferred in bytes

*timeout*

time in msec to wait for the message to complete before timing out (if 0 the wait is forever)

## Context

`!in_interrupt ()`

## Description

This function sends a simple interrupt message to a specified endpoint and waits for the message to complete, or timeout.

If successful, it returns 0, otherwise a negative error number. The number of actual bytes transferred will be stored in the `actual_length` parameter.

Don't use this function from within an interrupt context, like a bottom half handler. If you need an asynchronous message, or need to send a message from within interrupt context, use `usb_submit_urb`. If a thread in your driver uses this call, make sure your `disconnect` method can wait for it to complete. Since you don't have a handle on the URB used, you can't cancel the request.

## usb\_bulk\_msg

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_bulk_msg` — Builds a bulk urb, sends it off and waits for completion

### Synopsis

```
int usb_bulk_msg (struct usb_device * usb_dev, unsigned int
pipe, void * data, int len, int * actual_length, int timeout);
```

### Arguments

*usb\_dev*

pointer to the usb device to send the message to

*pipe*

endpoint “pipe” to send the message to

*data*

pointer to the data to send

*len*

length in bytes of the data to send

*actual\_length*

pointer to a location to put the actual length transferred in bytes

*timeout*

time in msec to wait for the message to complete before timing out (if 0 the wait is forever)

## Context

`!in_interrupt ()`

## Description

This function sends a simple bulk message to a specified endpoint and waits for the message to complete, or timeout.

If successful, it returns 0, otherwise a negative error number. The number of actual bytes transferred will be stored in the `actual_length` parameter.

Don't use this function from within an interrupt context, like a bottom half handler. If you need an asynchronous message, or need to send a message from within interrupt context, use `usb_submit_urb`. If a thread in your driver uses this call, make sure your `disconnect` method can wait for it to complete. Since you don't have a handle on the URB used, you can't cancel the request.

Because there is no `usb_interrupt_msg` and no `USBDEVFS_INTERRUPT` ioctl, users are forced to abuse this routine by using it to submit URBs for interrupt endpoints. We will take the liberty of creating an interrupt URB (with the default interval) if the target is an interrupt endpoint.

## usb\_sg\_init

**LINUX**

## Name

`usb_sg_init` — initializes scatterlist-based bulk/interrupt I/O request

## Synopsis

```
int usb_sg_init (struct usb_sg_request * io, struct usb_device  
* dev, unsigned pipe, unsigned period, struct scatterlist *  
sg, int nents, size_t length, gfp_t mem_flags);
```

## Arguments

*io*

request block being initialized. until `usb_sg_wait` returns, treat this as a pointer to an opaque block of memory,

*dev*

the usb device that will send or receive the data

*pipe*

endpoint “pipe” used to transfer the data

*period*

polling rate for interrupt endpoints, in frames or (for high speed endpoints) microframes; ignored for bulk

*sg*

scatterlist entries

*nents*

how many entries in the scatterlist

*length*

how many bytes to send from the scatterlist, or zero to send every byte identified in the list.

*mem\_flags*

SLAB\_\* flags affecting memory allocations in this call

## Description

Returns zero for success, else a negative errno value. This initializes a scatter/gather request, allocating resources such as I/O mappings and urb memory (except maybe memory used by USB controller drivers).

The request must be issued using `usb_sg_wait`, which waits for the I/O to complete (or to be canceled) and then cleans up all resources allocated by `usb_sg_init`.

The request may be canceled with `usb_sg_cancel`, either before or after `usb_sg_wait` is called.

## usb\_sg\_wait

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_sg_wait` — synchronously execute scatter/gather request

### Synopsis

```
void usb_sg_wait (struct usb_sg_request * io);
```

## Arguments

*io*

request block handle, as initialized with `usb_sg_init`. some fields become accessible when this call returns.

## Context

`!in_interrupt ()`

## Description

This function blocks until the specified I/O operation completes. It leverages the grouping of the related I/O requests to get good transfer rates, by queueing the requests. At higher speeds, such queuing can significantly improve USB throughput.

There are three kinds of completion for this function. (1) success, where `io->status` is zero. The number of `io->bytes` transferred is as requested. (2) error, where `io->status` is a negative `errno` value. The number of `io->bytes` transferred before the error is usually less than requested, and can be nonzero. (3) cancellation, a type of error with status `-ECONNRESET` that is initiated by `usb_sg_cancel`.

When this function returns, all memory allocated through `usb_sg_init` or this call will have been freed. The request block parameter may still be passed to `usb_sg_cancel`, or it may be freed. It could also be reinitialized and then reused.

## Data Transfer Rates

Bulk transfers are valid for full or high speed endpoints. The best full speed data rate is 19 packets of 64 bytes each per frame, or 1216 bytes per millisecond. The best high speed data rate is 13 packets of 512 bytes each per microframe, or 52 KBytes per millisecond.

The reason to use interrupt transfers through this API would most likely be to reserve high speed bandwidth, where up to 24 KBytes per millisecond could be transferred. That capability is less useful for low or full speed interrupt endpoints, which allow at most one packet per millisecond, of at most 8 or 64 bytes (respectively).

# usb\_sg\_cancel

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_sg_cancel` — stop scatter/gather i/o issued by `usb_sg_wait`

### Synopsis

```
void usb_sg_cancel (struct usb_sg_request * io);
```

### Arguments

*io*

request block, initialized with `usb_sg_init`

### Description

This stops a request after it has been started by `usb_sg_wait`. It can also prevents one initialized by `usb_sg_init` from starting, so that call just frees resources allocated to the request.

# usb\_get\_descriptor

## LINUX

## Name

`usb_get_descriptor` — issues a generic GET\_DESCRIPTOR request

## Synopsis

```
int usb_get_descriptor (struct usb_device * dev, unsigned char  
type, unsigned char index, void * buf, int size);
```

## Arguments

*dev*

the device whose descriptor is being retrieved

*type*

the descriptor type (USB\_DT\_\*)

*index*

the number of the descriptor

*buf*

where to put the descriptor

*size*

how big is “buf”?

## Context

`!lin_interrupt ()`



## Description

Gets a USB descriptor. Convenience functions exist to simplify getting some types of descriptors. Use `usb_get_string` or `usb_string` for `USB_DT_STRING`. Device (`USB_DT_DEVICE`) and configuration descriptors (`USB_DT_CONFIG`) are part of the device structure. In addition to a number of USB-standard descriptors, some devices also use class-specific or vendor-specific descriptors.

This call is synchronous, and may not be used in an interrupt context.

Returns the number of bytes received on success, or else the status code returned by the underlying `usb_control_msg` call.

## usb\_string

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_string` — returns ISO 8859-1 version of a string descriptor

### Synopsis

```
int usb_string (struct usb_device * dev, int index, char *
buf, size_t size);
```

### Arguments

*dev*

the device whose string descriptor is being retrieved

*index*

the number of the descriptor

*buf*

where to put the string

*size*

how big is “buf”?

## Context

`!in_interrupt ()`

## Description

This converts the UTF-16LE encoded strings returned by devices, from `usb_get_string_descriptor`, to null-terminated ISO-8859-1 encoded ones that are more usable in most kernel contexts. Note that all characters in the chosen descriptor that can’t be encoded using ISO-8859-1 are converted to the question mark (“?”) character, and this function chooses strings in the first language supported by the device.

The ASCII (or, redundantly, “US-ASCII”) character set is the seven-bit subset of ISO 8859-1. ISO-8859-1 is the eight-bit subset of Unicode, and is appropriate for use many uses of English and several other Western European languages. (But it doesn’t include the “Euro” symbol.)

This call is synchronous, and may not be used in an interrupt context.

Returns length of the string ( $\geq 0$ ) or `usb_control_msg` status ( $< 0$ ).

## usb\_get\_status

**LINUX**

Kernel Hackers Manual September 2007

## Name

`usb_get_status` — issues a GET\_STATUS call

## Synopsis

```
int usb_get_status (struct usb_device * dev, int type, int
target, void * data);
```

## Arguments

*dev*

the device whose status is being checked

*type*

USB\_RECIP\_\*; for device, interface, or endpoint

*target*

zero (for device), else interface or endpoint number

*data*

pointer to two bytes of bitmap data

## Context

!in\_interrupt ()

## Description

Returns device, interface, or endpoint status. Normally only of interest to see if the device is self powered, or has enabled the remote wakeup facility; or whether a bulk or interrupt endpoint is halted (“stalled”).

Bits in these status bitmaps are set using the SET\_FEATURE request, and cleared using the CLEAR\_FEATURE request. The `usb_clear_halt` function should be used to clear halt (“stall”) status.

This call is synchronous, and may not be used in an interrupt context.

Returns the number of bytes received on success, or else the status code returned by the underlying `usb_control_msg` call.

# usb\_clear\_halt

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_clear_halt` — tells device to clear endpoint halt/stall condition

### Synopsis

```
int usb_clear_halt (struct usb_device * dev, int pipe);
```

### Arguments

*dev*

device whose endpoint is halted

*pipe*

endpoint “pipe” being cleared

### Context

!in\_interrupt ()

### Description

This is used to clear halt conditions for bulk and interrupt endpoints, as reported by URB completion status. Endpoints that are halted are sometimes referred to as being “stalled”. Such endpoints are unable to transmit or receive data until the halt status is cleared. Any URBs queued for such an endpoint should normally be

unlinked by the driver before clearing the halt condition, as described in sections 5.7.5 and 5.8.5 of the USB 2.0 spec.

Note that control and isochronous endpoints don't halt, although control endpoints report "protocol stall" (for unsupported requests) using the same status code used to report a true stall.

This call is synchronous, and may not be used in an interrupt context.

Returns zero on success, or else the status code returned by the underlying `usb_control_msg` call.

## usb\_set\_interface

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_set_interface` — Makes a particular alternate setting be current

### Synopsis

```
int usb_set_interface (struct usb_device * dev, int interface,
int alternate);
```

### Arguments

*dev*

the device whose interface is being updated

*interface*

the interface being updated

*alternate*

the setting being chosen.

## Context

`!lin_interrupt ()`

## Description

This is used to enable data transfers on interfaces that may not be enabled by default. Not all devices support such configurability. Only the driver bound to an interface may change its setting.

Within any given configuration, each interface may have several alternative settings. These are often used to control levels of bandwidth consumption. For example, the default setting for a high speed interrupt endpoint may not send more than 64 bytes per microframe, while interrupt transfers of up to 3KBytes per microframe are legal. Also, isochronous endpoints may never be part of an interface's default setting. To access such bandwidth, alternate interface settings must be made current.

Note that in the Linux USB subsystem, bandwidth associated with an endpoint in a given alternate setting is not reserved until an URB is submitted that needs that bandwidth. Some other operating systems allocate bandwidth early, when a configuration is chosen.

This call is synchronous, and may not be used in an interrupt context. Also, drivers must not change altsettings while urbs are scheduled for endpoints in that interface; all such urbs must first be completed (perhaps forced by unlinking).

Returns zero on success, or else the status code returned by the underlying `usb_control_msg` call.

## **usb\_reset\_configuration**

**LINUX**

## Name

`usb_reset_configuration` — lightweight device reset

## Synopsis

```
int usb_reset_configuration (struct usb_device * dev);
```

## Arguments

*dev*

the device whose configuration is being reset

## Description

This issues a standard SET\_CONFIGURATION request to the device using the current configuration. The effect is to reset most USB-related state in the device, including interface altsettings (reset to zero), endpoint halts (cleared), and data toggle (only for bulk and interrupt endpoints). Other usbcore state is unchanged, including bindings of usb device drivers to interfaces.

Because this affects multiple interfaces, avoid using this with composite (multi-interface) devices. Instead, the driver for each interface may use `usb_set_interface` on the interfaces it claims. Be careful though; some devices don't support the SET\_INTERFACE request, and others won't reset all the interface state (notably data toggles). Resetting the whole configuration would affect other drivers' interfaces.

The caller must own the device lock.

Returns zero on success, else a negative error code.

# usb\_driver\_set\_configuration

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_driver_set_configuration` — Provide a way for drivers to change device configurations

### Synopsis

```
int usb_driver_set_configuration (struct usb_device * udev,  
int config);
```

### Arguments

*udev*

the device whose configuration is being updated

*config*

the configuration being chosen.

### Context

In process context, must be able to sleep

### Description

Device interface drivers are not allowed to change device configurations. This is because changing configurations will destroy the interface the driver is bound to and create new ones; it would be like a floppy-disk driver telling the computer to replace the floppy-disk drive with a tape drive!



Still, in certain specialized circumstances the need may arise. This routine gets around the normal restrictions by using a work thread to submit the change-config request.

Returns 0 if the request was successfully queued, error code otherwise. The caller has no way to know whether the queued request will eventually succeed.

## usb\_register\_dev

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_register_dev` — register a USB device, and ask for a minor number

### Synopsis

```
int usb_register_dev (struct usb_interface * intf, struct
usb_class_driver * class_driver);
```

### Arguments

*intf*

pointer to the `usb_interface` that is being registered

*class\_driver*

pointer to the `usb_class_driver` for this device

## Description

This should be called by all USB drivers that use the USB major number. If `CONFIG_USB_DYNAMIC_MINORS` is enabled, the minor number will be dynamically allocated out of the list of available ones. If it is not enabled, the minor number will be based on the next available free minor, starting at the `class_driver->minor_base`.

This function also creates a usb class device in the sysfs tree.

`usb_deregister_dev` must be called when the driver is done with the minor numbers given out by this function.

Returns `-EINVAL` if something bad happens with trying to register a device, and 0 on success.

## usb\_deregister\_dev

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_deregister_dev` — deregister a USB device's dynamic minor.

### Synopsis

```
void usb_deregister_dev (struct usb_interface * intf, struct  
usb_class_driver * class_driver);
```

### Arguments

*intf*

pointer to the `usb_interface` that is being deregistered

*class\_driver*

pointer to the `usb_class_driver` for this device

## Description

Used in conjunction with `usb_register_dev`. This function is called when the USB driver is finished with the minor numbers gotten from a call to `usb_register_dev` (usually when the device is disconnected from the system.)

This function also removes the usb class device from the sysfs tree.

This should be called by all drivers that use the USB major number.

# usb\_driver\_claim\_interface

## LINUX

Kernel Hackers Manual September 2007

## Name

`usb_driver_claim_interface` — bind a driver to an interface

## Synopsis

```
int usb_driver_claim_interface (struct usb_driver * driver,
struct usb_interface * iface, void * priv);
```

## Arguments

*driver*

the driver to be bound

*iface*

the interface to which it will be bound; must be in the usb device's active configuration

*priv*

driver data associated with that interface

## Description

This is used by usb device drivers that need to claim more than one interface on a device when probing (audio and acm are current examples). No device driver should directly modify internal `usb_interface` or `usb_device` structure members.

Few drivers should need to use this routine, since the most natural way to bind to an interface is to return the private data from the driver's `probe` method.

Callers must own the device lock, so driver `probe` entries don't need extra locking, but other call contexts may need to explicitly claim that lock.

# usb\_driver\_release\_interface

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_driver_release_interface` — unbind a driver from an interface

## Synopsis

```
void usb_driver_release_interface (struct usb_driver * driver,  
struct usb_interface * iface);
```

## Arguments

*driver*

the driver to be unbound

*iface*

the interface from which it will be unbound

## Description

This can be used by drivers to release an interface without waiting for their `disconnect` methods to be called. In typical cases this also causes the driver `disconnect` method to be called.

This call is synchronous, and may not be used in an interrupt context. Callers must own the device lock, so driver `disconnect` entries don't need extra locking, but other call contexts may need to explicitly claim that lock.

## usb\_match\_id

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_match_id` — find first `usb_device_id` matching device or interface

### Synopsis

```
const struct usb_device_id * usb_match_id (struct
usb_interface * interface, const struct usb_device_id * id);
```

## Arguments

*interface*

the interface of interest

*id*

array of `usb_device_id` structures, terminated by zero entry

## Description

`usb_match_id` searches an array of `usb_device_id`'s and returns the first one matching the device or interface, or null. This is used when binding (or rebinding) a driver to an interface. Most USB device drivers will use this indirectly, through the usb core, but some layered driver frameworks use it directly. These device tables are exported with `MODULE_DEVICE_TABLE`, through `modutils`, to support the driver loading functionality of USB hotplugging.

## What Matches

The “`match_flags`” element in a `usb_device_id` controls which members are used. If the corresponding bit is set, the value in the `device_id` must match its corresponding member in the device or interface descriptor, or else the `device_id` does not match.

“`driver_info`” is normally used only by device drivers, but you can create a wildcard “matches anything” `usb_device_id` as a driver's “`modules.usbmap`” entry if you provide an id with only a nonzero “`driver_info`” field. If you do this, the USB device driver's `probe` routine should use additional intelligence to decide whether to bind to the specified interface.

## What Makes Good `usb_device_id` Tables

The match algorithm is very simple, so that intelligence in driver selection must come from smart driver id records. Unless you have good reasons to use another selection policy, provide match elements only in related groups, and order match specifiers from specific to general. Use the macros provided for that purpose if you can.

The most specific match specifiers use device descriptor data. These are commonly used with product-specific matches; the `USB_DEVICE` macro lets you provide vendor and product IDs, and you can also match against ranges of product

revisions. These are widely used for devices with application or vendor specific `bDeviceClass` values.

Matches based on device class/subclass/protocol specifications are slightly more general; use the `USB_DEVICE_INFO` macro, or its siblings. These are used with single-function devices where `bDeviceClass` doesn't specify that each interface has its own class.

Matches based on interface class/subclass/protocol are the most general; they let drivers bind to any interface on a multiple-function device. Use the `USB_INTERFACE_INFO` macro, or its siblings, to match class-per-interface style devices (as recorded in `bInterfaceClass`).

Note that an entry created by `USB_INTERFACE_INFO` won't match any interface if the device class is set to Vendor-Specific. This is deliberate; according to the USB spec the meanings of the interface class/subclass/protocol for these devices are also vendor-specific, and hence matching against a standard product class wouldn't work anyway. If you really want to use an interface-based match for such a device, create a match record that also specifies the vendor ID. (Unfortunately there isn't a standard macro for creating records like this.)

Within those groups, remember that not all combinations are meaningful. For example, don't give a product version range without vendor and product IDs; or specify a protocol without its associated class and subclass.

## usb\_register\_device\_driver

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_register_device_driver` — register a USB device (not interface) driver

### Synopsis

```
int usb_register_device_driver (struct usb_device_driver *
new_udriver, struct module * owner);
```

## Arguments

*new\_udriver*

USB operations for the device driver

*owner*

module owner of this driver.

## Description

Registers a USB device driver with the USB core. The list of unattached devices will be rescanned whenever a new driver is added, allowing the new driver to attach to any recognized devices. Returns a negative error code on failure and 0 on success.

# usb\_deregister\_device\_driver

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_deregister_device_driver` — unregister a USB device (not interface) driver

## Synopsis

```
void usb_deregister_device_driver (struct usb_device_driver *  
udriver);
```



## Arguments

*udriver*

USB operations of the device driver to unregister

## Context

must be able to sleep

## Description

Unlinks the specified driver from the internal USB driver list.

# usb\_register\_driver

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_register_driver` — register a USB interface driver

## Synopsis

```
int usb_register_driver (struct usb_driver * new_driver,  
struct module * owner, const char * mod_name);
```

## Arguments

*new\_driver*

USB operations for the interface driver

*owner*

module owner of this driver.

*mod\_name*

module name string

## Description

Registers a USB interface driver with the USB core. The list of unattached interfaces will be rescanned whenever a new driver is added, allowing the new driver to attach to any recognized interfaces. Returns a negative error code on failure and 0 on success.

## NOTE

if you want your driver to use the USB major number, you must call `usb_register_dev` to enable that functionality. This function no longer takes care of that.

## usb\_deregister

### LINUX

Kernel Hackers Manual September 2007

## Name

`usb_deregister` — unregister a USB interface driver

## Synopsis

```
void usb_deregister (struct usb_driver * driver);
```

## Arguments

*driver*

USB operations of the interface driver to unregister

## Context

must be able to sleep

## Description

Unlinks the specified driver from the internal USB driver list.

## NOTE

If you called `usb_register_dev`, you still need to call `usb_deregister_dev` to clean up your driver's allocated minor numbers, this \* call will no longer do it for you.

## usb\_autopm\_put\_interface

**LINUX**

## Name

`usb_autopm_put_interface` — decrement a USB interface's PM-usage counter

## Synopsis

```
void usb_autopm_put_interface (struct usb_interface * intf);
```

## Arguments

*intf*

the `usb_interface` whose counter should be decremented

## Description

This routine should be called by an interface driver when it is finished using *intf* and wants to allow it to autosuspend. A typical example would be a character-device driver when its device file is closed.

The routine decrements *intf*'s usage counter. When the counter reaches 0, a delayed autosuspend request for *intf*'s device is queued. When the delay expires, if *intf*->`pm_usage_cnt` is still  $\leq 0$  along with all the other usage counters for the sibling interfaces and *intf*'s `usb_device`, the device and all its interfaces will be autosuspended.

Note that *intf*->`pm_usage_cnt` is owned by the interface driver. The core will not change its value other than the increment and decrement in `usb_autopm_get_interface` and `usb_autopm_put_interface`. The driver may use this simple counter-oriented discipline or may set the value any way it likes.

If the driver has set *intf*->`needs_remote_wakeup` then autosuspend will take place only if the device's remote-wakeup facility is enabled.

Suspend method calls queued by this routine can arrive at any time while *intf* is resumed and its usage counter is equal to 0. They are not protected by the

`usb_device`'s lock but only by its `pm_mutex`. Drivers must provide their own synchronization.

This routine can run only in process context.

## usb\_autopm\_get\_interface

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_autopm_get_interface` — increment a USB interface's PM-usage counter

### Synopsis

```
int usb_autopm_get_interface (struct usb_interface * intf);
```

### Arguments

*intf*

the `usb_interface` whose counter should be incremented

### Description

This routine should be called by an interface driver when it wants to use *intf* and needs to guarantee that it is not suspended. In addition, the routine prevents *intf* from being autosuspended subsequently. (Note that this will not prevent suspend events originating in the PM core.) This prevention will persist until `usb_autopm_put_interface` is called or *intf* is unbound. A typical example would be a character-device driver when its device file is opened.

The routine increments *intf*'s usage counter. (However if the autoresume fails then the counter is re-decremented.) So long as the counter is greater than 0, autosuspend will not be allowed for *intf* or its `usb_device`. When the driver is finished using *intf* it should call `usb_autopm_put_interface` to decrement the usage counter and queue a delayed autosuspend request (if the counter is  $\leq 0$ ).

Note that *intf*->`pm_usage_cnt` is owned by the interface driver. The core will not change its value other than the increment and decrement in `usb_autopm_get_interface` and `usb_autopm_put_interface`. The driver may use this simple counter-oriented discipline or may set the value any way it likes.

Resume method calls generated by this routine can arrive at any time while *intf* is suspended. They are not protected by the `usb_device`'s lock but only by its `pm_mutex`. Drivers must provide their own synchronization.

This routine can run only in process context.

## usb\_autopm\_set\_interface

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_autopm_set_interface` — set a USB interface's autosuspend state

### Synopsis

```
int usb_autopm_set_interface (struct usb_interface * intf);
```

### Arguments

*intf*

the `usb_interface` whose state should be set

## Description

This routine sets the autosuspend state of *intf*'s device according to *intf*'s usage counter, which the caller must have set previously. If the counter is  $\leq 0$ , the device is autosuspended (if it isn't already suspended and if nothing else prevents the autosuspend). If the counter is  $> 0$ , the device is autoresumed (if it isn't already awake).

## usb\_ifnum\_to\_if

### LINUX

Kernel Hackers Manual September 2007

## Name

`usb_ifnum_to_if` — get the interface object with a given interface number

## Synopsis

```
struct usb_interface * usb_ifnum_to_if (const struct
usb_device * dev, unsigned ifnum);
```

## Arguments

*dev*

the device whose current configuration is considered

*ifnum*

the desired interface

## Description

This walks the device descriptor for the currently active configuration and returns a pointer to the interface with that particular interface number, or null.

Note that configuration descriptors are not required to assign interface numbers sequentially, so that it would be incorrect to assume that the first interface in that descriptor corresponds to interface zero. This routine helps device drivers avoid such mistakes. However, you should make sure that you do the right thing with any alternate settings available for this interfaces.

Don't call this function unless you are bound to one of the interfaces on this device or you have locked the device!

## usb\_altnum\_to\_altsetting

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_altnum_to_altsetting` — get the altsetting structure with a given

### Synopsis

```
struct usb_host_interface * usb_altnum_to_altsetting (const  
struct usb_interface * intf, unsigned int altnum);
```

### Arguments

*intf*

the interface containing the altsetting in question



*altnum*

the desired alternate setting number

## Description

This searches the altsetting array of the specified interface for an entry with the correct `bAlternateSetting` value and returns a pointer to that entry, or null.

Note that altsettings need not be stored sequentially by number, so it would be incorrect to assume that the first altsetting entry in the array corresponds to altsetting zero. This routine helps device drivers avoid such mistakes.

Don't call this function unless you are bound to the `intf` interface or you have locked the device!

## Description

This searches the altsetting array of the specified interface for an entry with the correct `bAlternateSetting` value and returns a pointer to that entry, or null.

Note that altsettings need not be stored sequentially by number, so it would be incorrect to assume that the first altsetting entry in the array corresponds to altsetting zero. This routine helps device drivers avoid such mistakes.

Don't call this function unless you are bound to the `intf` interface or you have locked the device!

## usb\_find\_interface

### LINUX

Kernel Hackers Manual September 2007

## Name

`usb_find_interface` — find `usb_interface` pointer for driver and device

## Synopsis

```
struct usb_interface * usb_find_interface (struct usb_driver *  
drv, int minor);
```

## Arguments

*drv*

the driver whose current configuration is considered

*minor*

the minor number of the desired device

## Description

This walks the driver device list and returns a pointer to the interface with the matching minor. Note, this only works for devices that share the USB major number.

# usb\_get\_dev

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_get_dev` — increments the reference count of the usb device structure

## Synopsis

```
struct usb_device * usb_get_dev (struct usb_device * dev);
```

## Arguments

*dev*

the device being referenced

## Description

Each live reference to a device should be refcounted.

Drivers for USB interfaces should normally record such references in their `probe` methods, when they bind to an interface, and release them by calling `usb_put_dev`, in their `disconnect` methods.

A pointer to the device with the incremented reference counter is returned.

## usb\_put\_dev

### LINUX

Kernel Hackers Manual September 2007

## Name

`usb_put_dev` — release a use of the usb device structure

## Synopsis

```
void usb_put_dev (struct usb_device * dev);
```

## Arguments

*dev*

device that's been disconnected

## Description

Must be called when a user of a device is finished with it. When the last user of the device calls this function, the memory of the device is freed.

# usb\_get\_intf

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_get_intf` — increments the reference count of the usb interface structure

## Synopsis

```
struct usb_interface * usb_get_intf (struct usb_interface *  
intf);
```

## Arguments

*intf*

the interface being referenced

## Description

Each live reference to a interface must be refcounted.

Drivers for USB interfaces should normally record such references in their `probe` methods, when they bind to an interface, and release them by calling `usb_put_intf`, in their `disconnect` methods.

A pointer to the interface with the incremented reference counter is returned.

## usb\_put\_intf

### LINUX

Kernel Hackers Manual September 2007

## Name

`usb_put_intf` — release a use of the usb interface structure

## Synopsis

```
void usb_put_intf (struct usb_interface * intf);
```

## Arguments

*intf*

interface that's been decremented

## Description

Must be called when a user of an interface is finished with it. When the last user of the interface calls this function, the memory of the interface is freed.

# usb\_lock\_device\_for\_reset

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_lock_device_for_reset` — cautiously acquire the lock for a

### Synopsis

```
int usb_lock_device_for_reset (struct usb_device * udev, const  
struct usb_interface * iface);
```

### Arguments

*udev*

device that's being locked

*iface*

interface bound to the driver making the request (optional)

### Description

Attempts to acquire the device lock, but fails if the device is NOTATTACHED or SUSPENDED, or if *iface* is specified and the interface is neither BINDING nor BOUND. Rather than sleeping to wait for the lock, the routine polls repeatedly. This is to prevent deadlock with disconnect; in some drivers (such as usb-storage) the `disconnect` or `suspend` method will block waiting for a device reset to complete.

Returns a negative error code for failure, otherwise 1 or 0 to indicate that the device will or will not have to be unlocked. (0 can be returned when an interface is given and is BINDING, because in that case the driver already owns the device lock.)

## Description

Attempts to acquire the device lock, but fails if the device is NOTATTACHED or SUSPENDED, or if iface is specified and the interface is neither BINDING nor BOUND. Rather than sleeping to wait for the lock, the routine polls repeatedly. This is to prevent deadlock with disconnect; in some drivers (such as usb-storage) the disconnect or suspend method will block waiting for a device reset to complete.

Returns a negative error code for failure, otherwise 1 or 0 to indicate that the device will or will not have to be unlocked. (0 can be returned when an interface is given and is BINDING, because in that case the driver already owns the device lock.)

# usb\_find\_device

## LINUX

Kernel Hackers Manual September 2007

## Name

`usb_find_device` — find a specific usb device in the system

## Synopsis

```
struct usb_device * usb_find_device (u16 vendor_id, u16
product_id);
```

## Arguments

*vendor\_id*

the vendor id of the device to find

*product\_id*

the product id of the device to find

## Description

Returns a pointer to a struct `usb_device` if such a specified usb device is present in the system currently. The usage count of the device will be incremented if a device is found. Make sure to call `usb_put_dev` when the caller is finished with the device.

If a device with the specified vendor and product id is not found, NULL is returned.

# usb\_get\_current\_frame\_number

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_get_current_frame_number` — return current bus frame number

## Synopsis

```
int usb_get_current_frame_number (struct usb_device * dev);
```



## Arguments

*dev*

the device whose bus is being queried

## Description

Returns the current frame number for the USB host controller used with the given USB device. This can be used when scheduling isochronous requests.

Note that different kinds of host controller have different “scheduling horizons”. While one type might support scheduling only 32 frames into the future, others could support scheduling up to 1024 frames into the future.

## usb\_buffer\_alloc

### LINUX

Kernel Hackers Manual September 2007

## Name

`usb_buffer_alloc` — allocate dma-consistent buffer for  
URB\_NO\_XXX\_DMA\_MAP

## Synopsis

```
void * usb_buffer_alloc (struct usb_device * dev, size_t size,
gfp_t mem_flags, dma_addr_t * dma);
```

## Arguments

*dev*

device the buffer will be used with

*size*

requested buffer size

*mem\_flags*

affect whether allocation may block

*dma*

used to return DMA address of buffer

## Description

Return value is either null (indicating no buffer could be allocated), or the cpu-space pointer to a buffer that may be used to perform DMA to the specified device. Such cpu-space buffers are returned along with the DMA address (through the pointer provided).

These buffers are used with `URB_NO_XXX_DMA_MAP` set in `urb->transfer_flags` to avoid behaviors like using “DMA bounce buffers”, or tying down I/O mapping hardware for long idle periods. The implementation varies between platforms, depending on details of how DMA will work to this device. Using these buffers also helps prevent cacheline sharing problems on architectures where CPU caches are not DMA-coherent.

When the buffer is no longer used, free it with `usb_buffer_free`.

## usb\_buffer\_free

**LINUX**

## Name

`usb_buffer_free` — free memory allocated with `usb_buffer_alloc`

## Synopsis

```
void usb_buffer_free (struct usb_device * dev, size_t size,  
void * addr, dma_addr_t dma);
```

## Arguments

*dev*

device the buffer was used with

*size*

requested buffer size

*addr*

CPU address of buffer

*dma*

DMA address of buffer

## Description

This reclaims an I/O buffer, letting it be reused. The memory must have been allocated using `usb_buffer_alloc`, and the parameters must match those provided in that allocation request.

# usb\_buffer\_map

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_buffer_map` — create DMA mapping(s) for an urb

### Synopsis

```
struct urb * usb_buffer_map (struct urb * urb);
```

### Arguments

*urb*

urb whose transfer\_buffer/setup\_packet will be mapped

### Description

Return value is either null (indicating no buffer could be mapped), or the parameter. `URB_NO_TRANSFER_DMA_MAP` and `URB_NO_SETUP_DMA_MAP` are added to `urb->transfer_flags` if the operation succeeds. If the device is connected to this system through a non-DMA controller, this operation always succeeds.

This call would normally be used for an urb which is reused, perhaps as the target of a large periodic transfer, with `usb_buffer_dma_sync` calls to synchronize memory and dma state.

Reverse the effect of this call with `usb_buffer_unmap`.

# usb\_buffer\_dmasync

## LINUX

Kernel Hackers ManualSeptember 2007

### Name

`usb_buffer_dmasync` — synchronize DMA and CPU view of buffer(s)

### Synopsis

```
void usb_buffer_dmasync (struct urb * urb);
```

### Arguments

*urb*

urb whose transfer\_buffer/setup\_packet will be synchronized

# usb\_buffer\_unmap

## LINUX

Kernel Hackers ManualSeptember 2007

### Name

`usb_buffer_unmap` — free DMA mapping(s) for an urb

## Synopsis

```
void usb_buffer_unmap (struct urb * urb);
```

## Arguments

*urb*

urb whose transfer\_buffer will be unmapped

## Description

Reverses the effect of `usb_buffer_map`.

## usb\_buffer\_map\_sg

### LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_buffer_map_sg` — create scatterlist DMA mapping(s) for an endpoint

## Synopsis

```
int usb_buffer_map_sg (const struct usb_device * dev, unsigned  
pipe, struct scatterlist * sg, int nents);
```

## Arguments

*dev*

device to which the scatterlist will be mapped

*pipe*

endpoint defining the mapping direction

*sg*

the scatterlist to map

*nents*

the number of entries in the scatterlist

## Description

Return value is either  $< 0$  (indicating no buffers could be mapped), or the number of DMA mapping array entries in the scatterlist.

The caller is responsible for placing the resulting DMA addresses from the scatterlist into URB transfer buffer pointers, and for setting the `URB_NO_TRANSFER_DMA_MAP` transfer flag in each of those URBs.

Top I/O rates come from queuing URBs, instead of waiting for each one to complete before starting the next I/O. This is particularly easy to do with scatterlists. Just allocate and submit one URB for each DMA mapping entry returned, stopping on the first error or when all succeed. Better yet, use the `usb_sg_*`() calls, which do that (and more) for you.

This call would normally be used when translating scatterlist requests, rather than `usb_buffer_map`, since on some hardware (with IOMMUs) it may be able to coalesce mappings for improved I/O efficiency.

Reverse the effect of this call with `usb_buffer_unmap_sg`.

## usb\_buffer\_dmasync\_sg

**LINUX**

## Name

`usb_buffer_dmasync_sg` — synchronize DMA and CPU view of scatterlist  
buffer(s)

## Synopsis

```
void usb_buffer_dmasync_sg (const struct usb_device * dev,  
unsigned pipe, struct scatterlist * sg, int n_hw_ents);
```

## Arguments

*dev*

device to which the scatterlist will be mapped

*pipe*

endpoint defining the mapping direction

*sg*

the scatterlist to synchronize

*n\_hw\_ents*

the positive return value from `usb_buffer_map_sg`

## Description

Use this when you are re-using a scatterlist's data buffers for another USB request.



# usb\_buffer\_unmap\_sg

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_buffer_unmap_sg` — free DMA mapping(s) for a scatterlist

### Synopsis

```
void usb_buffer_unmap_sg (const struct usb_device * dev,  
unsigned pipe, struct scatterlist * sg, int n_hw_ents);
```

### Arguments

*dev*

device to which the scatterlist will be mapped

*pipe*

endpoint defining the mapping direction

*sg*

the scatterlist to unmap

*n\_hw\_ents*

the positive return value from `usb_buffer_map_sg`

### Description

Reverses the effect of `usb_buffer_map_sg`.

# usb\_hub\_tt\_clear\_buffer

## LINUX

Kernel Hackers ManualSeptember 2007

### Name

`usb_hub_tt_clear_buffer` — clear control/bulk TT state in high speed hub

### Synopsis

```
void usb_hub_tt_clear_buffer (struct usb_device * udev, int  
pipe);
```

### Arguments

*udev*

the device whose split transaction failed

*pipe*

identifies the endpoint of the failed transaction

### Description

High speed HCDs use this to tell the hub driver that some split control or bulk transaction failed in a way that requires clearing internal state of a transaction translator. This is normally detected (and reported) from interrupt context.

It may not be possible for that hub to handle additional full (or low) speed transactions until that state is fully cleared out.

# usb\_root\_hub\_lost\_power

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_root_hub_lost_power` — called by HCD if the root hub lost Vbus power

### Synopsis

```
void usb_root_hub_lost_power (struct usb_device * rhdev);
```

### Arguments

*rhdev*

struct usb\_device for the root hub

### Description

The USB host controller driver calls this function when its root hub is resumed and Vbus power has been interrupted or the controller has been reset. The routine marks all the children of the root hub as NOTATTACHED and marks logical connect-change events on their ports.

# usb\_reset\_device

## LINUX

## Name

`usb_reset_device` — perform a USB port reset to reinitialize a device

## Synopsis

```
int usb_reset_device (struct usb_device * udev);
```

## Arguments

*udev*

device to reset (not in SUSPENDED or NOTATTACHED state)

## Description

WARNING - don't use this routine to reset a composite device (one with multiple interfaces owned by separate drivers)! Use `usb_reset_composite_device` instead.

Do a port reset, reassign the device's address, and establish its former operating configuration. If the reset fails, or the device's descriptors change from their values before the reset, or the original configuration and altsettings cannot be restored, a flag will be set telling `khudb` to pretend the device has been disconnected and then re-connected. All drivers will be unbound, and the device will be re-enumerated and probed all over again.

Returns 0 if the reset succeeded, `-ENODEV` if the device has been flagged for logical disconnection, or some other negative error code if the reset wasn't even attempted.

The caller must own the device lock. For example, it's safe to use this from a driver `probe` routine after downloading new firmware. For calls that might not occur during `probe`, drivers should lock the device using `usb_lock_device_for_reset`.

# usb\_reset\_composite\_device

## LINUX

Kernel Hackers Manual September 2007

### Name

`usb_reset_composite_device` — warn interface drivers and perform a USB port reset

### Synopsis

```
int usb_reset_composite_device (struct usb_device * udev,
struct usb_interface * iface);
```

### Arguments

*udev*

device to reset (not in SUSPENDED or NOTATTACHED state)

*iface*

interface bound to the driver making the request (optional)

### Description

Warns all drivers bound to registered interfaces (using their `pre_reset` method), performs the port reset, and then lets the drivers know that the reset is over (using their `post_reset` method).

Return value is the same as for `usb_reset_device`.

The caller must own the device lock. For example, it's safe to use this from a driver `probe` routine after downloading new firmware. For calls that might not occur during `probe`, drivers should lock the device using `usb_lock_device_for_reset`.

## *Chapter 5. USB Core APIs*

The interface locks are acquired during the `pre_reset` stage and released during the `post_reset` stage. However if `iface` is not `NULL` and is currently being probed, we assume that the caller already owns its lock.

# Chapter 6. Host Controller APIs

These APIs are only for use by host controller drivers, most of which implement standard register interfaces such as EHCI, OHCI, or UHCI. UHCI was one of the first interfaces, designed by Intel and also used by VIA; it doesn't do much in hardware. OHCI was designed later, to have the hardware do more work (bigger transfers, tracking protocol state, and so on). EHCI was designed with USB 2.0; its design has features that resemble OHCI (hardware does much more work) as well as UHCI (some parts of ISO support, TD list processing).

There are host controllers other than the "big three", although most PCI based controllers (and a few non-PCI based ones) use one of those interfaces. Not all host controllers use DMA; some use PIO, and there is also a simulator.

The same basic APIs are available to drivers for all those controllers. For historical reasons they are in two layers: struct `usb_bus` is a rather thin layer that became available in the 2.2 kernels, while struct `usb_hcd` is a more featureful layer (available in later 2.4 kernels and in 2.5) that lets HCDs share common code, to shrink driver size and significantly reduce hcd-specific behaviors.

## usb\_calc\_bus\_time

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_calc_bus_time` — approximate periodic transaction time in nanoseconds

### Synopsis

```
long usb_calc_bus_time (int speed, int is_input, int isoc, int bytecount);
```

## Arguments

*speed*

from dev->speed; USB\_SPEED\_{LOW,FULL,HIGH}

*is\_input*

true iff the transaction sends data to the host

*isoc*

true for isochronous transactions, false for interrupt ones

*bytecount*

how many bytes in the transaction.

## Description

Returns approximate bus time in nanoseconds for a periodic transaction. See USB 2.0 spec section 5.11.3; only periodic transfers need to be scheduled in software, this function is only used for such scheduling.

# usb\_hcd\_resume\_root\_hub

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

usb\_hcd\_resume\_root\_hub — called by HCD to resume its root hub

## Synopsis

```
void usb_hcd_resume_root_hub (struct usb_hcd * hcd);
```



## Arguments

*hcd*

host controller for this root hub

## Description

The USB host controller calls this function when its root hub is suspended (with the remote wakeup feature enabled) and a remote wakeup request is received. The routine submits a workqueue request to resume the root hub (that is, manage its downstream ports again).

# usb\_bus\_start\_enum

## LINUX

Kernel Hackers Manual September 2007

## Name

`usb_bus_start_enum` — start immediate enumeration (for OTG)

## Synopsis

```
int usb_bus_start_enum (struct usb_bus * bus, unsigned
port_num);
```

## Arguments

*bus*

the bus (must use hcd framework)

`port_num`

1-based number of port; usually bus->otg\_port

## Context

`in_interrupt`

## Description

Starts enumeration, with an immediate reset followed later by khubd identifying and possibly configuring the device. This is needed by OTG controller drivers, where it helps meet HNP protocol timing requirements for starting a port reset.

# usb\_hcd\_giveback\_urb

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_hcd_giveback_urb` — return URB from HCD to device driver

## Synopsis

```
void usb_hcd_giveback_urb (struct usb_hcd * hcd, struct urb *  
urb);
```

## Arguments

*hcd*

host controller returning the URB

*urb*

urb being returned to the USB device driver.

## Context

`in_interrupt`

## Description

This hands the URB from HCD to its USB device driver, using its completion function. The HCD has freed all per-urb resources (and is done using `urb->hcpriv`). It also released all HCD locks; the device driver won't cause problems if it frees, modifies, or resubmits this URB.

## usb\_hc\_died

### LINUX

Kernel Hackers Manual September 2007

## Name

`usb_hc_died` — report abnormal shutdown of a host controller (bus glue)

## Synopsis

```
void usb_hc_died (struct usb_hcd * hcd);
```

## Arguments

*hcd*

pointer to the HCD representing the controller

## Description

This is called by bus glue to report a USB host controller that died while operations may still have been pending. It's called automatically by the PCI glue, so only glue for non-PCI busses should need to call it.

# usb\_create\_hcd

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_create_hcd` — create and initialize an HCD structure

## Synopsis

```
struct usb_hcd * usb_create_hcd (const struct hc_driver *  
driver, struct device * dev, char * bus_name);
```

## Arguments

*driver*

HC driver that will use this hcd

*dev*device for this HC, stored in `hcd->self.controller`*bus\_name*value to store in `hcd->self.bus_name`

## Context

*!in\_interrupt*

## Description

Allocate a struct `usb_hcd`, with extra space at the end for the HC driver's private data. Initialize the generic members of the `hcd` structure.

If memory is unavailable, returns `NULL`.

# usb\_add\_hcd

## LINUX

Kernel Hackers Manual September 2007

## Name

`usb_add_hcd` — finish generic HCD structure initialization and register

## Synopsis

```
int usb_add_hcd (struct usb_hcd * hcd, unsigned int irqnum,
unsigned long irqflags);
```

## Arguments

*hcd*

the `usb_hcd` structure to initialize

*irqnum*

Interrupt line to allocate

*irqflags*

Interrupt type flags

## Finish the remaining parts of generic HCD initialization

allocate the buffers of consistent memory, register the bus, request the IRQ line, and call the driver's `reset` and `start` routines.

## `usb_remove_hcd`

### LINUX

Kernel Hackers Manual September 2007

### Name

`usb_remove_hcd` — shutdown processing for generic HCDs

### Synopsis

```
void usb_remove_hcd (struct usb_hcd * hcd);
```

## Arguments

*hcd*

the `usb_hcd` structure to remove

## Context

`!in_interrupt`

## Description

Disconnects the root hub, then reverses the effects of `usb_add_hcd`, invoking the HCD's `stop` method.

# usb\_hcd\_pci\_probe

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_hcd_pci_probe` — initialize PCI-based HCDs

## Synopsis

```
int usb_hcd_pci_probe (struct pci_dev * dev, const struct  
pci_device_id * id);
```

## Arguments

*dev*

USB Host Controller being probed

*id*

pci hotplug id connecting controller to HCD framework

## Context

`!in_interrupt`

## Description

Allocates basic PCI resources for this USB host controller, and then invokes the `start` method for the HCD associated with it through the hotplug entry's `driver_data`.

Store this function in the HCD's struct `pci_driver` as `probe`.

# usb\_hcd\_pci\_remove

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_hcd_pci_remove` — shutdown processing for PCI-based HCDs

## Synopsis

```
void usb_hcd_pci_remove (struct pci_dev * dev);
```



## Arguments

*dev*

USB Host Controller being removed

## Context

!in\_interrupt

## Description

Reverses the effect of `usb_hcd_pci_probe`, first invoking the HCD's `stop` method. It is always called from a thread context, normally “rmmod”, “apmd”, or something similar.

Store this function in the HCD's struct `pci_driver` as `remove`.

# usb\_hcd\_pci\_suspend

## LINUX

Kernel Hackers Manual September 2007

## Name

`usb_hcd_pci_suspend` — power management suspend of a PCI-based HCD

## Synopsis

```
int usb_hcd_pci_suspend (struct pci_dev * dev, pm_message_t
message);
```

## Arguments

*dev*

USB Host Controller being suspended

*message*

semantics in flux

## Description

Store this function in the HCD's struct `pci_driver` as `suspend`.

# usb\_hcd\_pci\_resume

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_hcd_pci_resume` — power management resume of a PCI-based HCD

## Synopsis

```
int usb_hcd_pci_resume (struct pci_dev * dev);
```

## Arguments

*dev*

USB Host Controller being resumed

## Description

Store this function in the HCD's struct `pci_driver` as `resume`.

# usb\_hcd\_pci\_shutdown

## LINUX

Kernel Hackers ManualSeptember 2007

## Name

`usb_hcd_pci_shutdown` — shutdown host controller

## Synopsis

```
void usb_hcd_pci_shutdown (struct pci_dev * dev);
```

## Arguments

*dev*

USB Host Controller being shutdown

# hcd\_buffer\_create

## LINUX

## Name

`hcd_buffer_create` — initialize buffer pools

## Synopsis

```
int hcd_buffer_create (struct usb_hcd * hcd);
```

## Arguments

*hcd*

the bus whose buffer pools are to be initialized

## Context

!in\_interrupt

## Description

Call this as part of initializing a host controller that uses the dma memory allocators. It initializes some pools of dma-coherent memory that will be shared by all drivers using that controller, or returns a negative `errno` value on error.

Call `hcd_buffer_destroy` to clean up after using those pools.

## `hcd_buffer_destroy`

**LINUX**

## Name

`hcd_buffer_destroy` — deallocate buffer pools

## Synopsis

```
void hcd_buffer_destroy (struct usb_hcd * hcd);
```

## Arguments

*hcd*

the bus whose buffer pools are to be destroyed

## Context

`!in_interrupt`

## Description

This frees the buffer pools created by `hcd_buffer_create`.



# Chapter 7. The USB Filesystem (usbfs)

This chapter presents the Linux *usbfs*. You may prefer to avoid writing new kernel code for your USB driver; that's the problem that *usbfs* set out to solve. User mode device drivers are usually packaged as applications or libraries, and may use *usbfs* through some programming library that wraps it. Such libraries include *libusb* (<http://libusb.sourceforge.net>) for C/C++, and *jUSB* (<http://jUSB.sourceforge.net>) for Java.

**Unfinished:** This particular documentation is incomplete, especially with respect to the asynchronous mode. As of kernel 2.5.66 the code and this (new) documentation need to be cross-reviewed.

Configure *usbfs* into Linux kernels by enabling the *USB filesystem* option (CONFIG\_USB\_DEVICEFS), and you get basic support for user mode USB device drivers. Until relatively recently it was often (confusingly) called *usbdevfs* although it wasn't solving what *devfs* was. Every USB device will appear in *usbfs*, regardless of whether or not it has a kernel driver.

## 7.1. What files are in "usbfs"?

Conventionally mounted at `/proc/bus/usb`, *usbfs* features include:

- `/proc/bus/usb/devices` ... a text file showing each of the USB devices on known to the kernel, and their configuration descriptors. You can also `poll()` this to learn about new devices.
- `/proc/bus/usb/BBB/DDD` ... magic files exposing the each device's configuration descriptors, and supporting a series of `ioctl`s for making device requests, including I/O to devices. (Purely for access by programs.)

Each bus is given a number (BBB) based on when it was enumerated; within each bus, each device is given a similar number (DDD). Those BBB/DDD paths are not "stable" identifiers; expect them to change even if you always leave the devices plugged in to the same hub port. *Don't even think of saving these in application configuration files.* Stable identifiers are available, for user mode applications that want to use them. HID and networking devices expose these stable IDs, so that for

example you can be sure that you told the right UPS to power down its second server. "usbfs" doesn't (yet) expose those IDs.

## 7.2. Mounting and Access Control

There are a number of mount options for *usbfs*, which will be of most interest to you if you need to override the default access control policy. That policy is that only root may read or write device files (*/proc/bus/BBB/DDD*) although anyone may read the *devices* or *drivers* files. I/O requests to the device also need the *CAP\_SYS\_RAWIO* capability,

The significance of that is that by default, all user mode device drivers need super-user privileges. You can change modes or ownership in a driver setup when the device hotplugs, or maye just start the driver right then, as a privileged server (or some activity within one). That's the most secure approach for multi-user systems, but for single user systems ("trusted" by that user) it's more convenient just to grant everyone all access (using the *devmode=0666* option) so the driver can start whenever it's needed.

The mount options for *usbfs*, usable in */etc/fstab* or in command line invocations of *mount*, are:

*busgid*=NNNNN

Controls the GID used for the */proc/bus/usb/BBB* directories. (Default: 0)

*busmode*=MMM

Controls the file mode used for the */proc/bus/usb/BBB* directories. (Default: 0555)

*busuid*=NNNNN

Controls the UID used for the */proc/bus/usb/BBB* directories. (Default: 0)

*devgid*=NNNNN

Controls the GID used for the */proc/bus/usb/BBB/DDD* files. (Default: 0)

*devmode*=MMM

Controls the file mode used for the */proc/bus/usb/BBB/DDD* files. (Default: 0644)

*devuid*=NNNNN

Controls the UID used for the */proc/bus/usb/BBB/DDD* files. (Default: 0)



*listgid*=NNNNN

Controls the GID used for the `/proc/bus/usb/devices` and `drivers` files. (Default: 0)

*listmode*=MMM

Controls the file mode used for the `/proc/bus/usb/devices` and `drivers` files. (Default: 0444)

*listuid*=NNNNN

Controls the UID used for the `/proc/bus/usb/devices` and `drivers` files. (Default: 0)

Note that many Linux distributions hard-wire the mount options for *usbfs* in their init scripts, such as `/etc/rc.d/rc.sysinit`, rather than making it easy to set this per-system policy in `/etc/fstab`.

## 7.3. `/proc/bus/usb/devices`

This file is handy for status viewing tools in user mode, which can scan the text format and ignore most of it. More detailed device status (including class and vendor status) is available from device-specific files. For information about the current format of this file, see the `Documentation/usb/proc_usb_info.txt` file in your Linux kernel sources.

This file, in combination with the `poll()` system call, can also be used to detect when devices are added or removed:

```
int fd;
struct pollfd pfd;

fd = open("/proc/bus/usb/devices", O_RDONLY);
pfd = { fd, POLLIN, 0 };
for (;;) {
    /* The first time through, this call will return immediately. */
    poll(&pfd, 1, -1);

    /* To see what's changed, compare the file's previous and current
       contents or scan the filesystem.  (Scanning is more precise.) */
}
```

Note that this behavior is intended to be used for informational and debug purposes. It would be more appropriate to use programs such as *udev* or *HAL* to initialize a device or start a user-mode helper program, for instance.

## 7.4. `/proc/bus/usb/BBB/DDD`

Use these files in one of these basic ways:

*They can be read*, producing first the device descriptor (18 bytes) and then the descriptors for the current configuration. See the USB 2.0 spec for details about those binary data formats. You'll need to convert most multibyte values from little endian format to your native host byte order, although a few of the fields in the device descriptor (both of the BCD-encoded fields, and the vendor and product IDs) will be byteswapped for you. Note that configuration descriptors include descriptors for interfaces, altsettings, endpoints, and maybe additional class descriptors.

*Perform USB operations* using *ioctl()* requests to make endpoint I/O requests (synchronously or asynchronously) or manage the device. These requests need the `CAP_SYS_RAWIO` capability, as well as filesystem access permissions. Only one *ioctl* request can be made on one of these device files at a time. This means that if you are synchronously reading an endpoint from one thread, you won't be able to write to a different endpoint from another thread until the read completes. This works for *half duplex* protocols, but otherwise you'd use asynchronous i/o requests.

## 7.5. Life Cycle of User Mode Drivers

Such a driver first needs to find a device file for a device it knows how to handle. Maybe it was told about it because a `/sbin/hotplug` event handling agent chose that driver to handle the new device. Or maybe it's an application that scans all the `/proc/bus/usb` device files, and ignores most devices. In either case, it should `read()` all the descriptors from the device file, and check them against what it knows how to handle. It might just reject everything except a particular vendor and product ID, or need a more complex policy.

Never assume there will only be one such device on the system at a time! If your code can't handle more than one device at a time, at least detect when there's more than one, and have your users choose which device to use.

Once your user mode driver knows what device to use, it interacts with it in either of two styles. The simple style is to make only control requests; some devices don't need more complex interactions than those. (An example might be software using

vendor-specific control requests for some initialization or configuration tasks, with a kernel driver for the rest.)

More likely, you need a more complex style driver: one using non-control endpoints, reading or writing data and claiming exclusive use of an interface. *Bulk* transfers are easiest to use, but only their sibling *interrupt* transfers work with low speed devices. Both interrupt and *isochronous* transfers offer service guarantees because their bandwidth is reserved. Such "periodic" transfers are awkward to use through *usbfs*, unless you're using the asynchronous calls. However, interrupt transfers can also be used in a synchronous "one shot" style.

Your user-mode driver should never need to worry about cleaning up request state when the device is disconnected, although it should close its open file descriptors as soon as it starts seeing the `ENODEV` errors.

## 7.6. The `ioctl()` Requests

To use these `ioctls`, you need to include the following headers in your userspace program:

```
#include <linux/usb.h>
#include <linux/usbdevice_fs.h>
#include <asm/byteorder.h>
```

The standard USB device model requests, from "Chapter 9" of the USB 2.0 specification, are automatically included from the `<linux/usb/ch9.h>` header.

Unless noted otherwise, the `ioctl` requests described here will update the modification time on the *usbfs* file to which they are applied (unless they fail). A return of zero indicates success; otherwise, a standard USB error code is returned. (These are documented in `Documentation/usb/error-codes.txt` in your kernel sources.)

Each of these files multiplexes access to several I/O streams, one per endpoint. Each device has one control endpoint (endpoint zero) which supports a limited RPC style RPC access. Devices are configured by *khudb* (in the kernel) setting a device-wide *configuration* that affects things like power consumption and basic functionality. The endpoints are part of USB *interfaces*, which may have *altsettings* affecting things like which endpoints are available. Many devices only have a single configuration and interface, so drivers for them will ignore configurations and *altsettings*.

## 7.6.1. Management/Status Requests

A number of usbfs requests don't deal very directly with device I/O. They mostly relate to device management and status. These are all synchronous requests.

### USBDEVFS\_CLAIMINTERFACE

This is used to force usbfs to claim a specific interface, which has not previously been claimed by usbfs or any other kernel driver. The `ioctl` parameter is an integer holding the number of the interface (bInterfaceNumber from descriptor).

Note that if your driver doesn't claim an interface before trying to use one of its endpoints, and no other driver has bound to it, then the interface is automatically claimed by usbfs.

This claim will be released by a `RELEASEINTERFACE` `ioctl`, or by closing the file descriptor. File modification time is not updated by this request.

### USBDEVFS\_CONNECTINFO

Says whether the device is lowspeed. The `ioctl` parameter points to a structure like this:

```
struct usbdevfs_connectinfo {
    unsigned int    devnum;
    unsigned char   slow;
};
```

File modification time is not updated by this request.

*You can't tell whether a "not slow" device is connected at high speed (480 MBit/sec) or just full speed (12 MBit/sec). You should know the devnum value already, it's the DDD value of the device file name.*

### USBDEVFS\_GETDRIVER

Returns the name of the kernel driver bound to a given interface (a string).

Parameter is a pointer to this structure, which is modified:

```
struct usbdevfs_getdriver {
    unsigned int    interface;
    char            driver[USBDEVFS_MAXDRIVERNAME + 1];
};
```

File modification time is not updated by this request.

### USBDEVFS\_IOCTL

Passes a request from userspace through to a kernel driver that has an `ioctl` entry in the *struct usb\_driver* it registered.

```
struct usbdevfs_ioctl {
```

```

        int        ifno;
        int        ioctl_code;
        void        *data;
};

/* user mode call looks like this.
 * 'request' becomes the driver->ioctl() 'code' parameter.
 * the size of 'param' is encoded in 'request', and that data
 * is copied to or from the driver->ioctl() 'buf' parameter.
 */
static int
usbdev_ioctl (int fd, int ifno, unsigned request, void *param)
{
    struct usbdevfs_ioctl wrapper;

    wrapper.ifno = ifno;
    wrapper.ioctl_code = request;
    wrapper.data = param;

    return ioctl (fd, USBDEVFS_IOCTL, &wrapper);
}

```

File modification time is not updated by this request.

This request lets kernel drivers talk to user mode code through filesystem operations even when they don't create a character or block special device. It's also been used to do things like ask devices what device special file should be used. Two pre-defined ioctls are used to disconnect and reconnect kernel drivers, so that user mode code can completely manage binding and configuration of devices.

#### USBDEVFS\_RELEASEINTERFACE

This is used to release the claim usbfs made on interface, either implicitly or because of a USBDEVFS\_CLAIMINTERFACE call, before the file descriptor is closed. The ioctl parameter is an integer holding the number of the interface (bInterfaceNumber from descriptor); File modification time is not updated by this request.

### Warning

*No security check is made to ensure that the task which made the claim is the one which is releasing it. This means that user mode driver may interfere other ones.*

#### USBDEVFS\_RESETEP

Resets the data toggle value for an endpoint (bulk or interrupt) to DATA0. The `ioctl` parameter is an integer endpoint number (1 to 15, as identified in the endpoint descriptor), with `USB_DIR_IN` added if the device's endpoint sends data to the host.

### Warning

*Avoid using this request. It should probably be removed. Using it typically means the device and driver will lose toggle synchronization. If you really lost synchronization, you likely need to completely handshake with the device, using a request like `CLEAR_HALT` or `SET_INTERFACE`.*

## 7.6.2. Synchronous I/O Support

Synchronous requests involve the kernel blocking until the user mode request completes, either by finishing successfully or by reporting an error. In most cases this is the simplest way to use usbfs, although as noted above it does prevent performing I/O to more than one endpoint at a time.

#### USBDEVFS\_BULK

Issues a bulk read or write request to the device. The `ioctl` parameter is a pointer to this structure:

```
struct usbdevfs_bulktransfer {
    unsigned int  ep;
    unsigned int  len;
    unsigned int  timeout; /* in milliseconds */
    void          *data;
};
```

The "ep" value identifies a bulk endpoint number (1 to 15, as identified in an endpoint descriptor), masked with `USB_DIR_IN` when referring to an endpoint which sends data to the host from the device. The length of the data buffer is identified by "len"; Recent kernels support requests up to about 128KBytes. *FIXME say how read length is returned, and how short reads are handled..*

#### USBDEVFS\_CLEAR\_HALT

Clears endpoint halt (stall) and resets the endpoint toggle. This is only meaningful for bulk or interrupt endpoints. The `ioctl` parameter is an integer

endpoint number (1 to 15, as identified in an endpoint descriptor), masked with `USB_DIR_IN` when referring to an endpoint which sends data to the host from the device.

Use this on bulk or interrupt endpoints which have stalled, returning *-EPIPE* status to a data transfer request. Do not issue the control request directly, since that could invalidate the host's record of the data toggle.

## USBDEVFS\_CONTROL

Issues a control request to the device. The `ioctl` parameter points to a structure like this:

```
struct usbdevfs_ctrltransfer {
    __u8    bRequestType;
    __u8    bRequest;
    __u16   wValue;
    __u16   wIndex;
    __u16   wLength;
    __u32   timeout; /* in milliseconds */
    void    *data;
};
```

The first eight bytes of this structure are the contents of the SETUP packet to be sent to the device; see the USB 2.0 specification for details. The `bRequestType` value is composed by combining a `USB_TYPE_*` value, a `USB_DIR_*` value, and a `USB_RECIP_*` value (from `<linux/usb.h>`). If `wLength` is nonzero, it describes the length of the data buffer, which is either written to the device (`USB_DIR_OUT`) or read from the device (`USB_DIR_IN`).

At this writing, you can't transfer more than 4 KBytes of data to or from a device; `usbfs` has a limit, and some host controller drivers have a limit. (That's not usually a problem.) *Also* there's no way to say it's not OK to get a short read back from the device.

## USBDEVFS\_RESET

Does a USB level device reset. The `ioctl` parameter is ignored. After the reset, this rebinds all device interfaces. File modification time is not updated by this request.

### Warning

*Avoid using this call* until some `usbcore` bugs get fixed, since it does not fully synchronize device, interface, and driver (not just `usbfs`) state.

## USBDEVFS\_SETINTERFACE

Sets the alternate setting for an interface. The ioctl parameter is a pointer to a structure like this:

```
struct usbdevfs_setinterface {
    unsigned int  interface;
    unsigned int  altsetting;
};
```

File modification time is not updated by this request.

Those struct members are from some interface descriptor applying to the current configuration. The interface number is the bInterfaceNumber value, and the altsetting number is the bAlternateSetting value. (This resets each endpoint in the interface.)

## USBDEVFS\_SETCONFIGURATION

Issues the `usb_set_configuration` call for the device. The parameter is an integer holding the number of a configuration (bConfigurationValue from descriptor). File modification time is not updated by this request.

### Warning

*Avoid using this call* until some usbcore bugs get fixed, since it does not fully synchronize device, interface, and driver (not just usbfs) state.

## 7.6.3. Asynchronous I/O Support

As mentioned above, there are situations where it may be important to initiate concurrent operations from user mode code. This is particularly important for periodic transfers (interrupt and isochronous), but it can be used for other kinds of USB requests too. In such cases, the asynchronous requests described here are essential. Rather than submitting one request and having the kernel block until it completes, the blocking is separate.

These requests are packaged into a structure that resembles the URB used by kernel device drivers. (No POSIX Async I/O support here, sorry.) It identifies the endpoint type (USBDEVFS\_URB\_TYPE\_\*), endpoint (number, masked with USB\_DIR\_IN as appropriate), buffer and length, and a user "context" value serving to uniquely identify each request. (It's usually a pointer to per-request data.) Flags can modify requests (not as many as supported for kernel drivers).



Each request can specify a realtime signal number (between SIGRTMIN and SIGRTMAX, inclusive) to request a signal be sent when the request completes.

When *usbfs* returns these urbs, the status value is updated, and the buffer may have been modified. Except for isochronous transfers, the *actual\_length* is updated to say how many bytes were transferred; if the *USBDEVFS\_URB\_DISABLE\_SPD* flag is set ("short packets are not OK"), if fewer bytes were read than were requested then you get an error report.

```
struct usbdevfs_iso_packet_desc {
    unsigned int          length;
    unsigned int          actual_length;
    unsigned int          status;
};

struct usbdevfs_urb {
    unsigned char          type;
    unsigned char          endpoint;
    int                   status;
    unsigned int           flags;
    void                  *buffer;
    int                   buffer_length;
    int                   actual_length;
    int                   start_frame;
    int                   number_of_packets;
    int                   error_count;
    unsigned int           signr;
    void                  *usercontext;
    struct usbdevfs_iso_packet_desc iso_frame_desc[];
};
```

For these asynchronous requests, the file modification time reflects when the request was initiated. This contrasts with their use with the synchronous requests, where it reflects when requests complete.

#### USBDEVFS\_DISCARDURB

*TBS* File modification time is not updated by this request.

#### USBDEVFS\_DISCSIGNAL

*TBS* File modification time is not updated by this request.

#### USBDEVFS\_REAPURB

*TBS* File modification time is not updated by this request.

USBDEVFS\_REAPURBNDELAY

*TBS* File modification time is not updated by this request.

USBDEVFS\_SUBMITURB

*TBS*